
www.teknikoffice.co.uk

Teknik

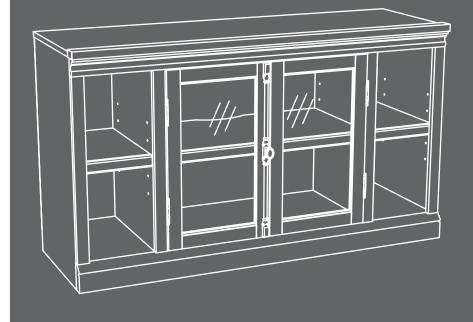

Your **centre** of **attention**.

Barrister Home Sideboard

Barrister Home Collection | Model 5416488

NOTE: THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents


Assembly Tools Required

Part Identification	3		No. 2 Phillips Screwdriver
Hardware Identification	4-5	→	Tip Shown Actual Size
Assembly Steps	6-20		Hammer
Français	21-24		Not actual size 🙂
Español	25-28		
Safety	29-30		Skip the power trip. This time.
Warranty	31		

▲ WARNING

Use of a TV that is too heavy or large is hazardous. A TV that is too heavy will create a risk of a tip-over that can cause severe injury or death. A TV that is too large for the available space might be accidentally pushed or bumped off the furniture, or subject to tip-over.

- Check the size and weight of your TV. Compare it to the diagram below before you begin assembly!
- This Sauder unit is designed for use with televisions weighing less than 95 pounds. Never use with a TV that weighs more.
- The size of the television, front-to-back and side-to-side, must fit within the space defined in the diagram.
 - Never place the front edge of the TV past the front edge of the TV support shelf (or stop molding if equipped)
 - Never allow the sides of the TV to extend past the side edges of the TV support surface.
 - If the TV has a CRT picture tube, the picture tube cone may extend past the rear of the support shelf.
- Be sure to apply the warning label as instructed in the last assembly step. The label provides important safety related information.

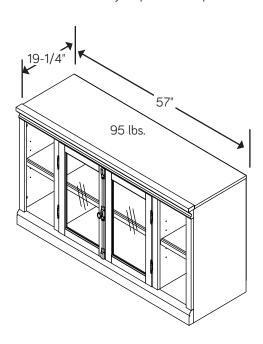

Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

Α	RIGHT END (1)
В	LEFT END (1)
С	RIGHT UPRIGHT (1)
D	LEFT UPRIGHT (1)
E2	TOP (1)
F	BOTTOM (1)

G	BACK (1)
Н	DOOR (1)
ı	DOOR (1)
J	LARGE ADJUSTABLE SHELF (1)
K	SMALL ADJUSTABLE SHELF (2)
L	BASE (1)

М	TOP MOLDING (1)
N	LARGE SHELF MOLDING (1)
0	SMALL SHELF MOLDING (2)
Р	END MOLDING (4)
Q	CATCH BRACE (1)
R	STOP MOLDING (1)

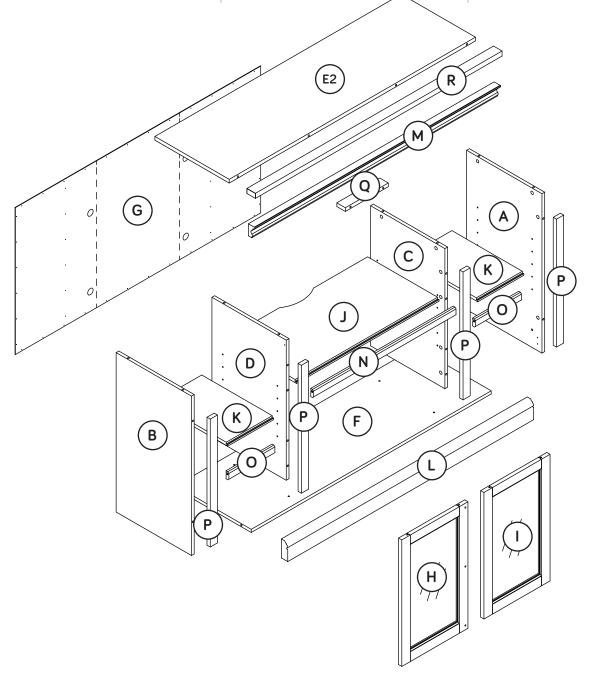

Hardware Identification

Screws are shown actual size. You may receive extra hardware with your unit.





HIDDEN CAM - 30



 
CAM DOWEL - 30




METAL BRACKET - 9



CORNER BRACKET - 2



HINGE - 4

 

SMALL MAGNETIC CATCH - 1



STRIKE PLATE - 2



MAGNETIC CATCH - 1



(69K) KNOB - 1



WARNING LABEL - 1



Never use this furniture with a TV that is too arge or too heavy. Severe injury or death can occur. The TV and furniture will be instable and may tip.

The TV must less than 95 lbs.
The base of the TV must be able to sit completely on this shelf.
Refer to instruction book for complete safety information.



 


(Refer to the last step for proper location and application)





DECORATIVE POST - 2



NAIL - 48



CAM COVER - 12



METAL PIN - 12



RUBBER SLEEVE - 12



Hardware Identification

F Screws are shown actual size. You may receive extra hardware with your unit.

 












(11S) BLACK 1/2" FLAT HEAD SCREW - 2





20S) SILVER 3/4" MACHINE SCREW - 2





(51S) BLACK 9/16" PAN HEAD SCREW - 2






(95S) SILVER 1-1/2" MACHINE SCREW - 1






- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Push thirty HIDDEN CAMS (1F) into the ENDS (A and B), UPRIGHTS (C and D), TOP (E2), BOTTOM (F), and CATCH BRACE (Q). Then, insert the metal end of a CAM DOWEL (2F) into each HIDDEN CAM.


Do not tighten the HIDDEN CAMS in this step.

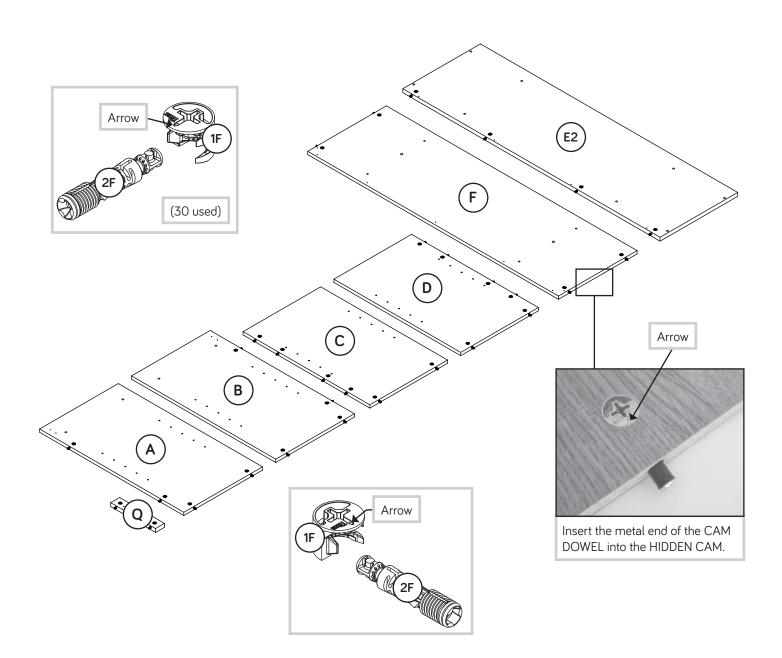

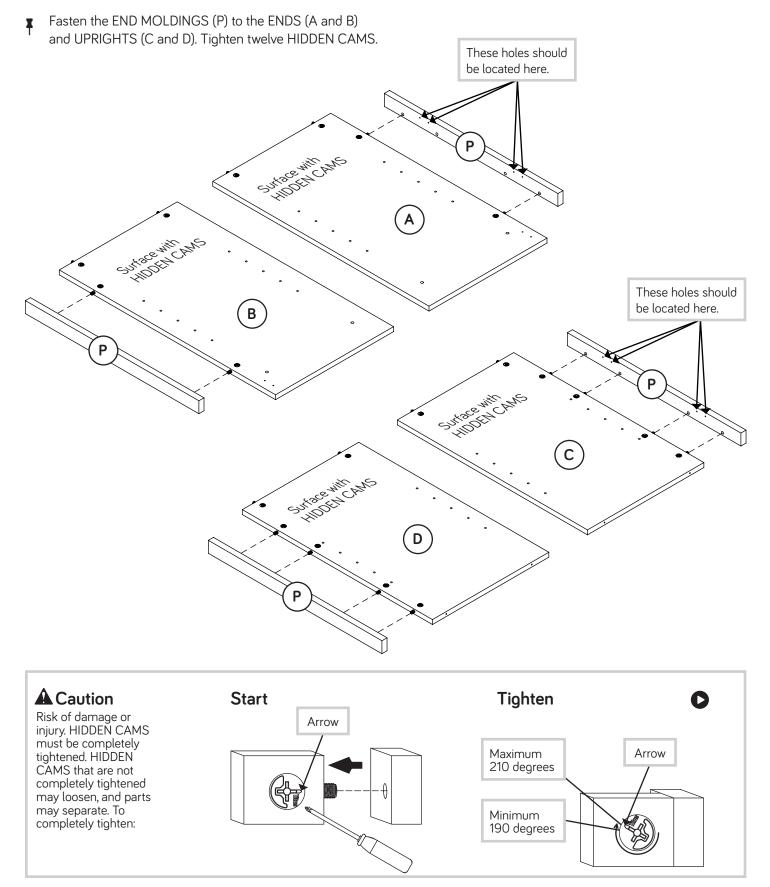

- Fasten the METAL BRACKETS (4G) to the UPRIGHTS (C and D), BOTTOM (F), and TOP MOLDING (M). Use nine BLACK 9/16" LARGE HEAD SCREWS (1S).
- NOTE: The METAL BRACKETS should hang over the edges slightly on the UPRIGHTS.
- NOTE: The METAL BRACKETS should be even with the edges



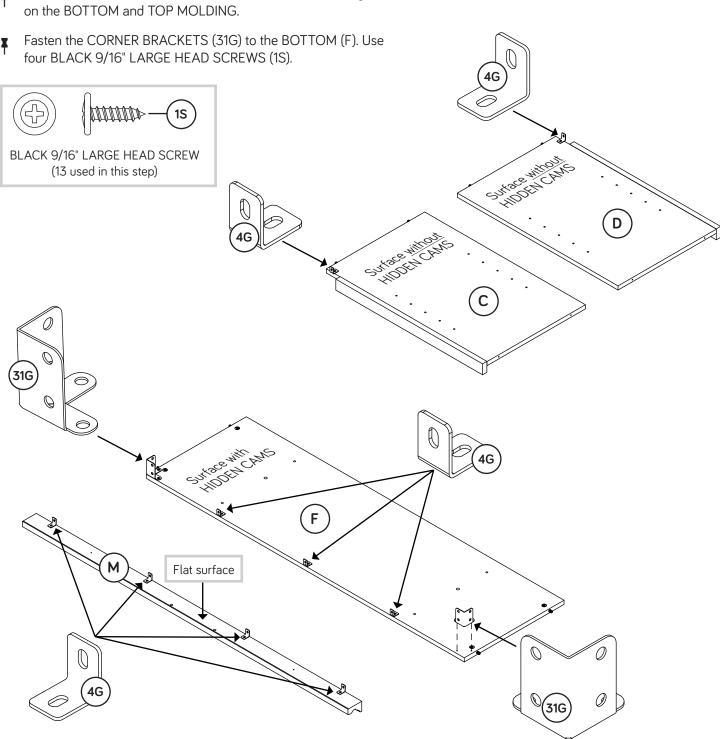


Remember:


Righty tighty. Lefty loosey.

Fasten the LEFT END (B) and STOP MOLDING (R) to the TOP (E2). Tighten six HIDDEN CAMS.





Do <u>not</u> stand the unit upright without the BACK fastened. The unit may collapse.

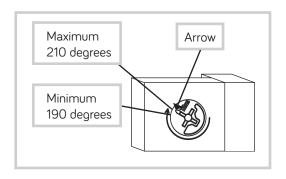

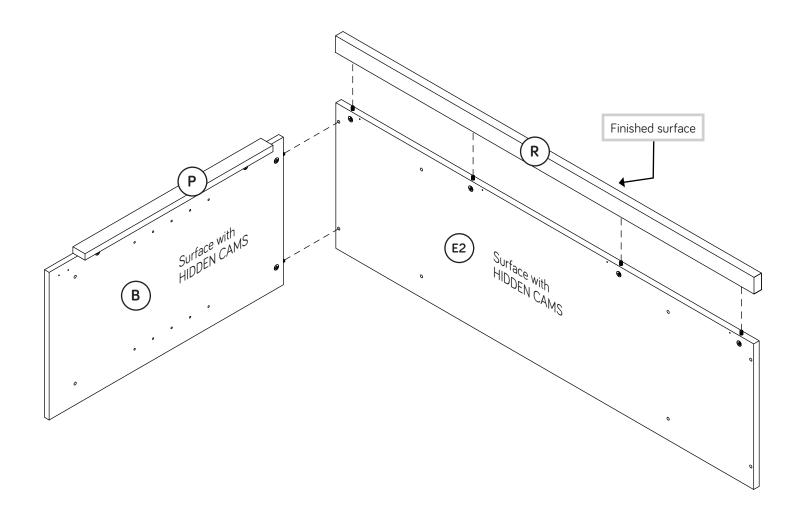



Fasten the UPRIGHTS (C and D) to the TOP (E2). Tighten four HIDDEN CAMS.

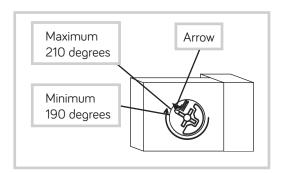

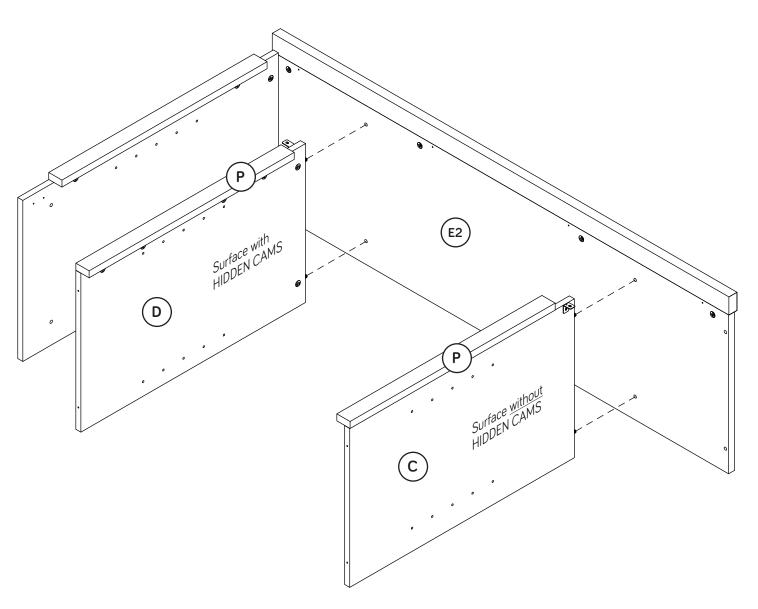



- Fasten the BOTTOM (F) to the LEFT END (B). Tighten two HIDDEN CAMS.
- Fasten the CORNER BRACKET (31G) on the BOTTOM (F) to the LEFT END (B). Use two BLACK 9/16" LARGE HEAD SCREWS (1S) through the CORNER BRACKET and into the LEFT END.
- Fasten the BOTTOM (F) to the UPRIGHTS (C and D). Use four BLACK 1-7/8" FLAT HEAD SCREWS (2S).

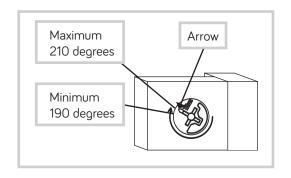

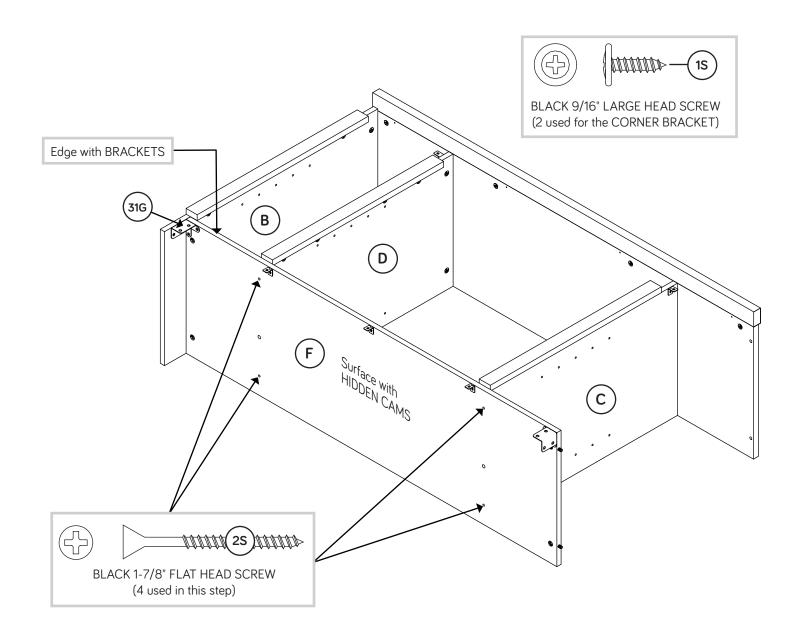



- Fasten the RIGHT END (A) to the TOP (E2). Tighten two HIDDEN CAMS.
- Fasten the RIGHT END (A) to the BOTTOM (F). Tighten two HIDDEN CAMS.
- Fasten the CORNER BRACKET (31G) on the BOTTOM (F) to the RIGHT END (A). Use two BLACK 9/16" LARGE HEAD SCREWS (1S) through the CORNER BRACKET and into the RIGHT END.

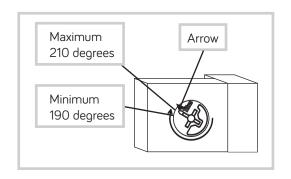

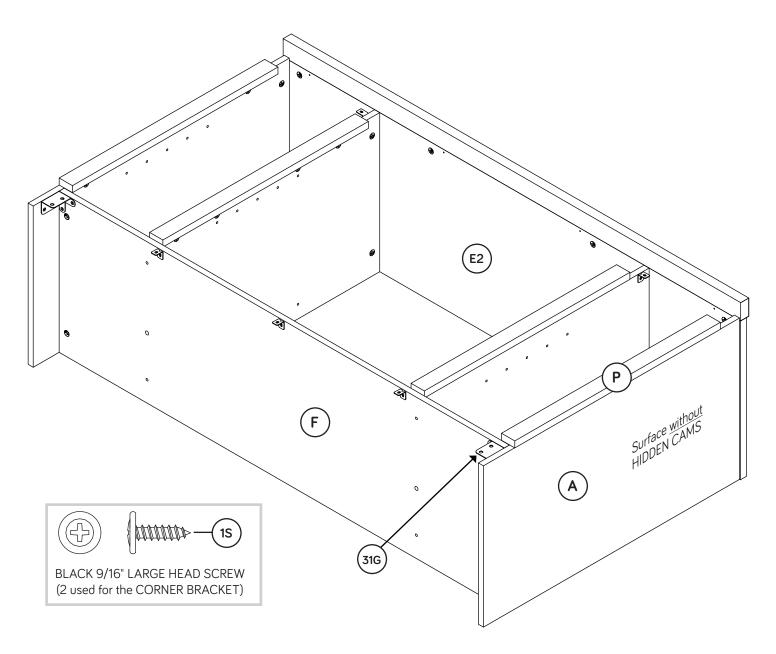

- Fasten the TOP MOLDING (M) to the TOP (E2). Use four BLACK 9/16" LARGE HEAD SCREWS (1S) through the BRACKETS and into the TOP.
- NOTE: To fasten the TOP MOLDING, you may need to loosen the HIDDEN CAMS in the END MOLDINGS (P). Then, retighten the HIDDEN CAMS.
- Fasten the TOP MOLDING (M) to the UPRIGHTS (C and D). Use two BLACK 9/16" LARGE HEAD SCREWS (1S) through the BRACKETS and into the TOP MOLDING.

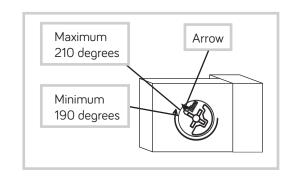


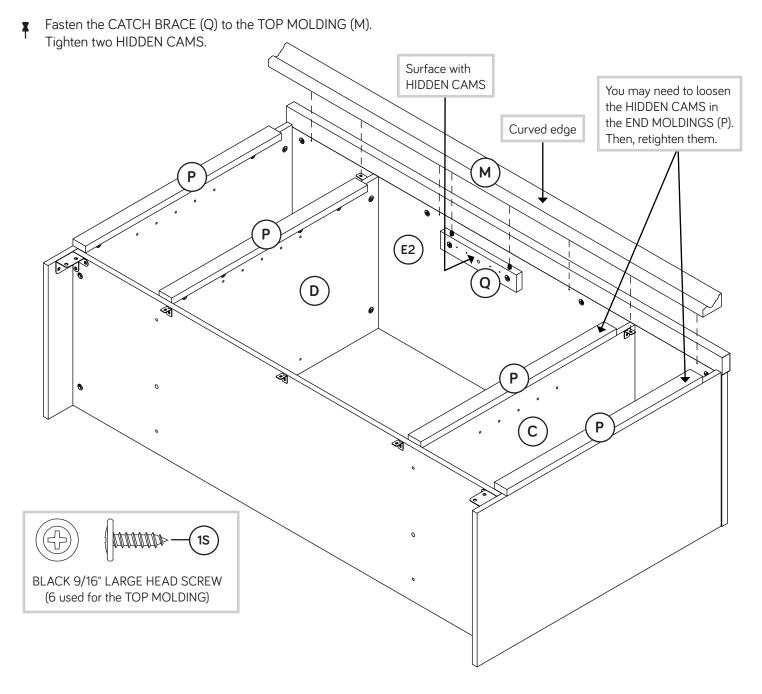

Fasten the BASE (L) to the ENDS (A and B) and BOTTOM (F). Use seven BLACK 9/16" LARGE HEAD SCREWS (1S) through the BRACKETS and into the BASE.



Don't worry. It isn't Rome. This can be built in a day.

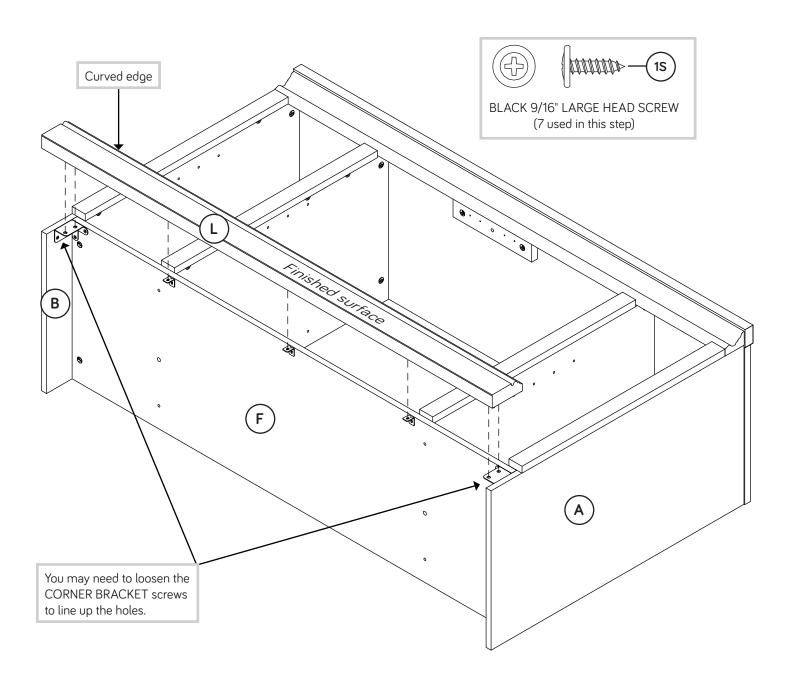


- Carefully turn your unit over onto its front edges. Unfold the BACK (G) and lay it over your unit.
- Make equal margins along all four edges of the BACK (G). Push on opposite corners of your unit if needed to make it "square".
- Fasten the BACK (G) to your unit using the NAILS (1N).
- NOTE: Be sure to tap NAILS into the holes that line up over the UPRIGHTS (C and D).
- NOTE: Perforations have been provided for access through the BACK. Carefully cut out the holes needed.
- Push the FEET (23E) into the holes in the BOTTOM (F).



Do <u>not</u> stand the unit upright without the BACK fastened. The unit may collapse.




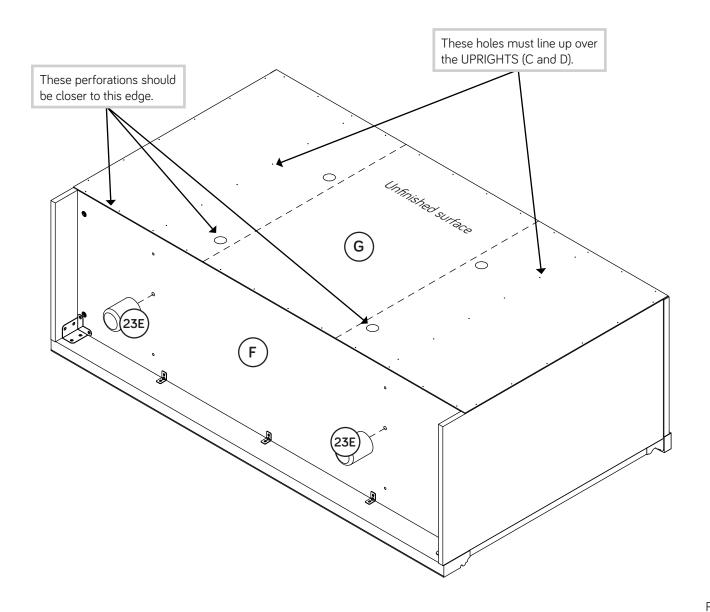


- IMPORTANT: You may need someone's help in this step.
- Carefully stand your unit upright.
- Push the SMALL MAGNETIC CATCH (2I) into the center hole in the CATCH BRACE (Q).
- Fasten the MAGNETIC CATCH (12I) to the CATCH BRACE (Q). Use two BLACK 9/16" PAN HEAD SCREWS (51S).
- NOTE: The MAGNETIC CATCH (12I) goes on the right side with DOOR (I).



Pro Tip: Lift with your legs. And, you know,

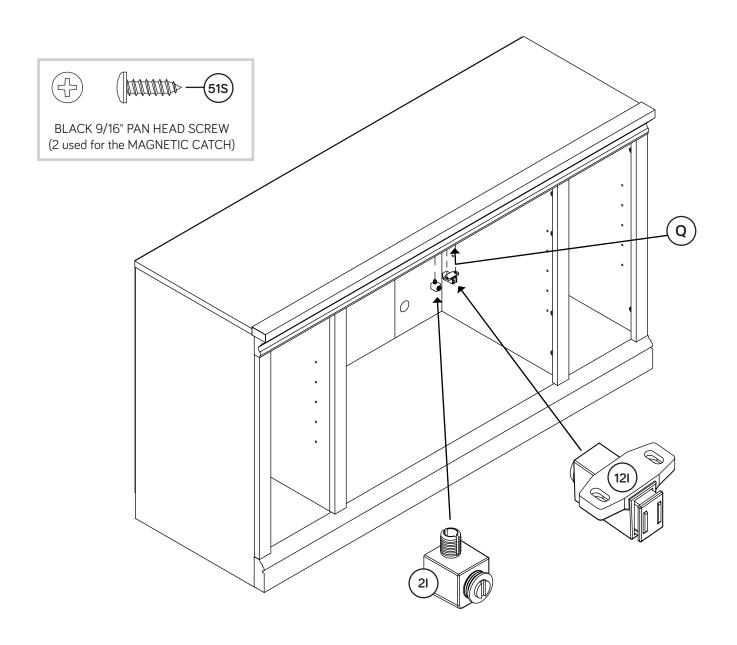



- Fasten the HINGES (27H) to the DOORS (H and I). Use eight BLACK 9/16" LARGE HEAD SCREWS (1S).
- **▼** NOTE: The HINGES should be positioned exactly as shown.

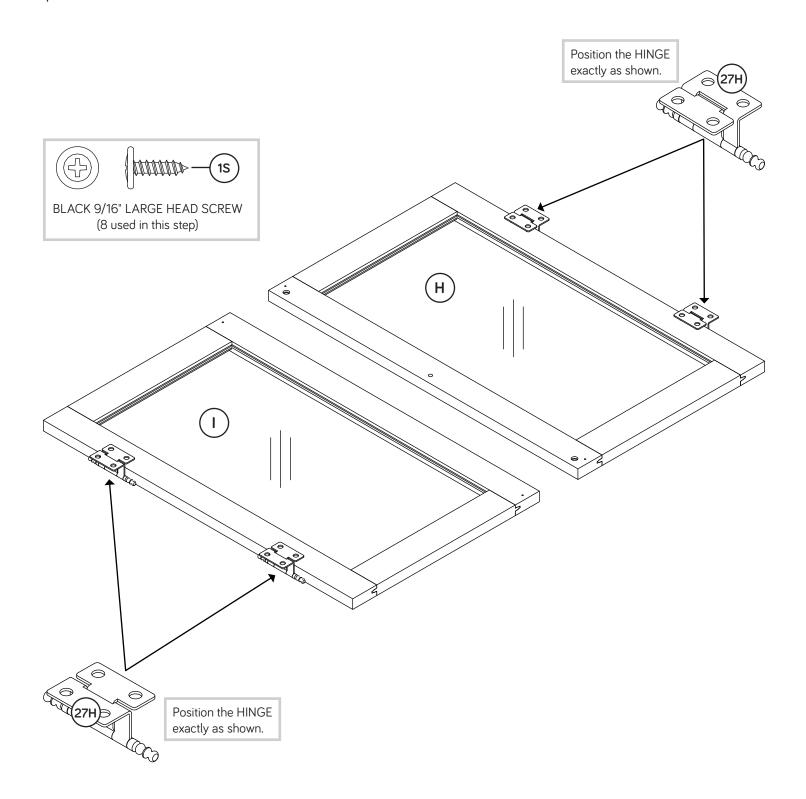


- Fasten the DOORS (H and I) to the END MOLDINGS (P) on the UPRIGHTS (C and D). Use eight BLACK 9/16" LARGE HEAD SCREWS (1S).
- Fasten the DECORATIVE ENDS (33M) to the DOOR (H). Use two SILVER 3/4" MACHINE SCREWS (20S).
- Insert the DECORATIVE POSTS (39M) into the DECORATIVE ENDS.
- Fasten the DECORATIVE BACKPLATE (34M) and DECORATIVE KNOB (69K) to the DOOR (H). Use a SILVER 1-1/2" MACHINE SCREW (95S).



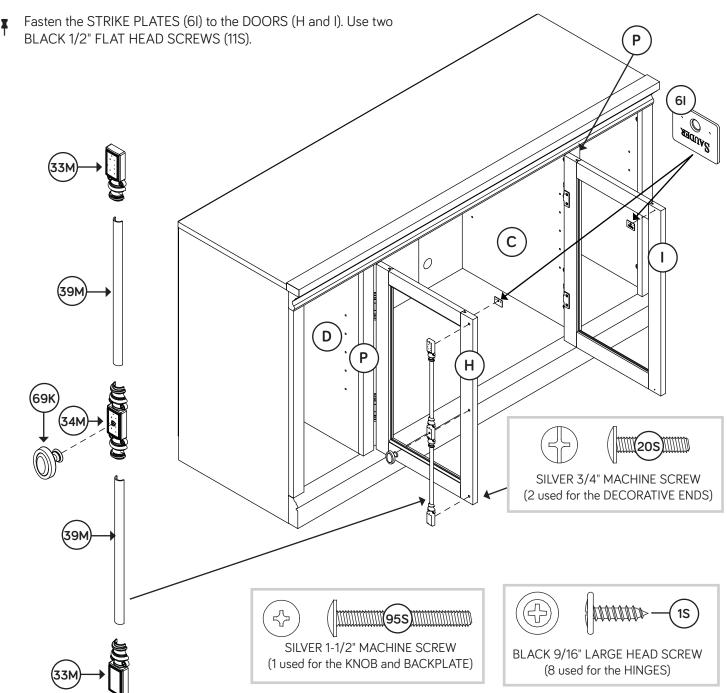

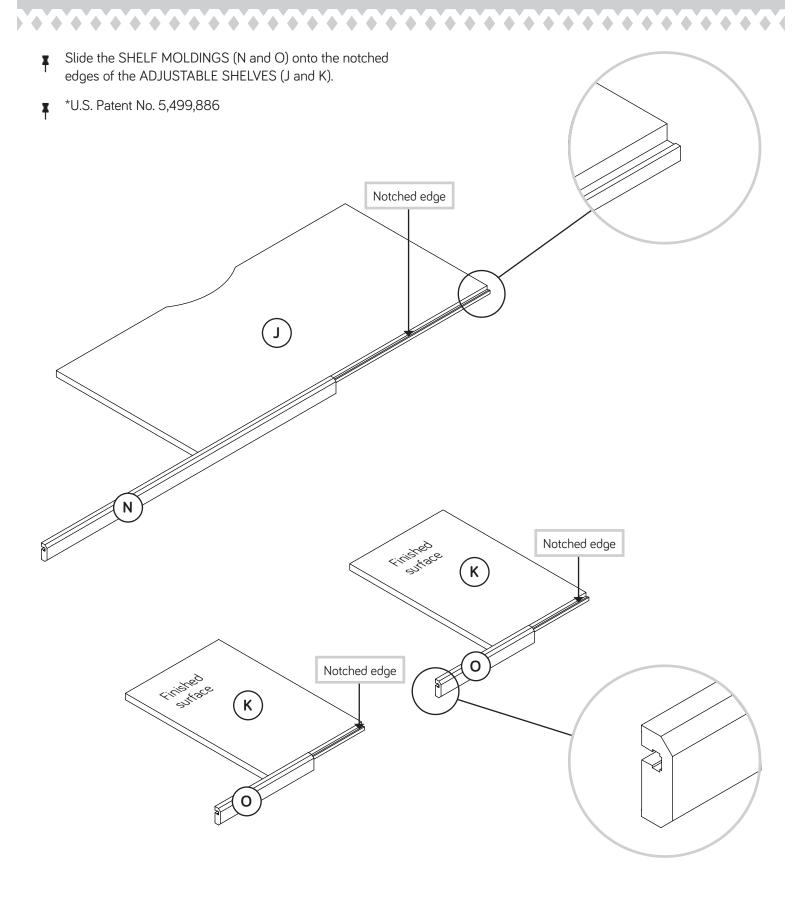

- Apply the WARNING LABEL (3L) to the TOP (E2). You should be able to read the label when the TV is removed from the unit. When the TV is in place, it should hide the label. Peel off the backing and apply the label as shown in the diagram.
- NOTE: This is a permanent label intended to last for the life of the product. Once applied, do <u>not</u> try to remove it.
- Push the RUBBER SLEEVES (2R) over the METAL PINS (1R). Insert the METAL PINS into the hole locations of your choice in the ENDS (A and B) and UPRIGHTS (C and D). Set the ADJUSTABLE SHELVES (J and K) onto the METAL PINS.
- Push a CAM COVER (13P) onto each visible HIDDEN CAM.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

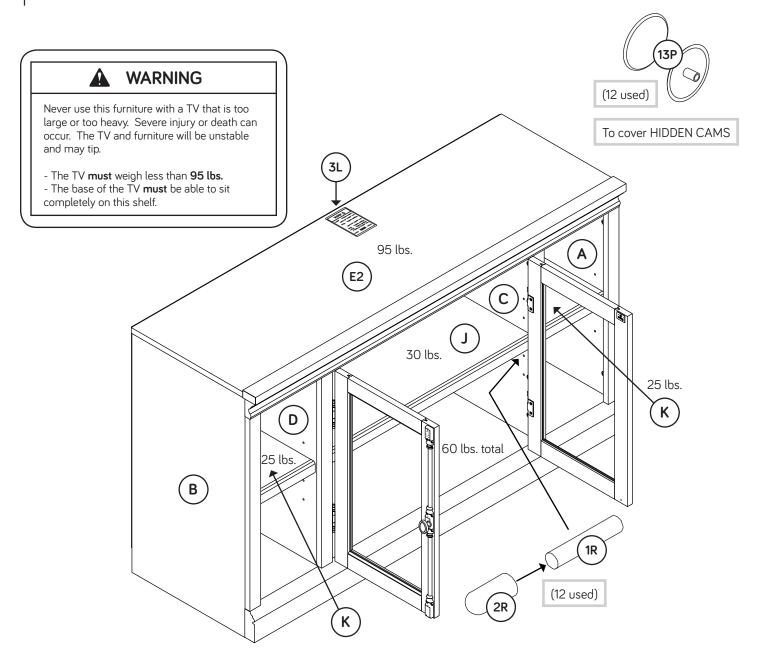

▲ WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following safety information.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result may tip over onto the child.

NEVER allow children to climb or play with the TV or furnishing supporting the TV.

NEVER place toys, food, remote, etc. on top of the TV or TV furnishing.

ALWAYS use either the safety hardware as instructed or other wall anchoring device.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or over turning onto a child.

NEVER place a TV on furniture that is not intended to support a TV.

NEVER exceed the maximum size and weight of the TV shown in the instructions.

Be sure to apply the TV warning label as shown in the instructions.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

NEVER exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible.

Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

ALWAYS unload shelves and drawers, starting with the top surfaces, before moving.

NEVER push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it.