www.teknikoffice.co.uk

**Teknik** 



Your **holder** for all **things** awesome.

# **Barrister Home TV Stand**

Barrister Home Collection | Model 5414720

**NOTE:** THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

#### **Table of Contents**


#### Assembly Tools Required

Part Identification	3		No. 2 Phillips Screwdriver
Hardware Identification	4	>> ===================================	Tip Shown Actual Size
Assembly Steps	5-22		Hammer
Français	23-25		Not actual size 🙂
Español	26-28		
Safety	29-30		Skip the power trip. This time.
Warranty	31		

#### **▲** WARNING

Use of a TV that is too heavy or large is hazardous. A TV that is too heavy will create a risk of a tip-over that can cause severe injury or death. A TV that is too large for the available space might be accidentally pushed or bumped off the furniture, or subject to tip-over.

- Check the size and weight of your TV. Compare it to the diagram below before you begin assembly!
- This Sauder unit is designed for use with televisions weighing less than 50 pounds. Never use with a TV that weighs more.
- The size of the television, front-to-back and side-to-side, must fit within the space defined in the diagram.
  - Never place the front edge of the TV past the front edge of the TV support shelf (or stop molding if equipped)
  - Never allow the sides of the TV to extend past the side edges of the TV support surface.
  - If the TV has a CRT picture tube, the picture tube cone may extend past the rear of the support shelf.
- Be sure to apply the warning label as instructed in the last assembly step. The label provides important safety related information.

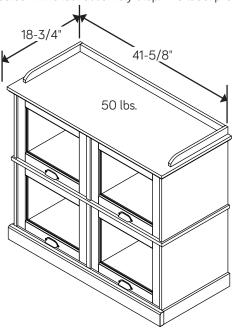

#### Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

Α	RIGHT END (1)
В	LEFT END (1)
С	LOWER RIGHT END (1)
D	LOWER LEFT END (1)
Е	UPRIGHT (1)
F	LOWER UPRIGHT (1)
G2	TOP (1)

Н	BOTTOM (1)
I	SHELF (1)
J	BACK (1)
K	BRACE (1)
L	DOOR (4)
М	FRONT MOLDING (1)
Ν	RIGHT MOLDING (1)


0	LEFT MOLDING (1)
P2	FRONT BASE (1)
Q	SIDE BASE (2)
R	SIDE RAIL (2)
S	BACK RAIL (1)

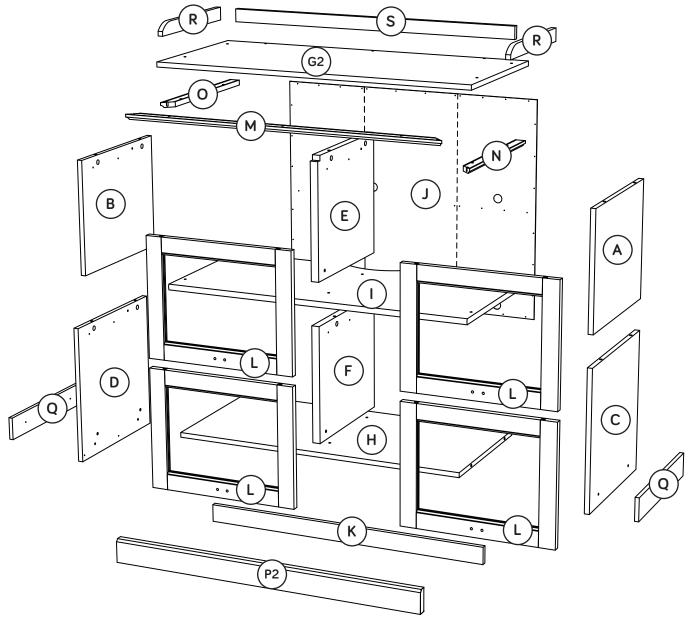


#### Hardware Identification


Screws are shown actual size. You may receive extra hardware with your unit. HIDDEN CAM - 16 CAM DOWEL - 12 CAM SCREW - 4 ANGLE BRACKET - 8 **MOLDING** (40G) PULL- 4 **DOOR HANGER-8** DOOR STOP - 4 19F CONNECTOR - 2 1L DOOR SLIDE - 8 WARNING LABEL - 1 WARNING Never use this furniture with a TV that is too large or too heavy. Severe injury or death can occur. The TV and furniture will be unstable and may tip. -The TV must less than 50 lbs.
-The base of the TV must be able to sit completely on this shelf. Refer to instruction book for complete safety information. Note: This is a permanent label. Do not e. Surface will be damaged. (Refer to the last step for proper location and application) 1N 1R METAL PIN - 8 2R **RUBBER SLEEVE - 8** NAIL - 46 25 BLACK 9/16" LARGE HEAD SCREW - 24 BLACK 1-7/8" FLAT HEAD SCREW - 15 BROWN 7/16" LARGE HEAD SCREW - 16 SILVER 1-1/8" FLAT HEAD SCREW - 7 (50S) GOLD 1" MACHINE SCREW - 8 (128) BROWN 1" FLAT HEAD SCREW - 4

- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Push sixteen HIDDEN CAMS (1F) into the ENDS (A and B), LOWER ENDS (C and D), UPRIGHTS (E and F), and BOTTOM (H). Then, insert the metal end of a CAM DOWEL (2F) into each HIDDEN CAM, except in the ENDS (A and B).

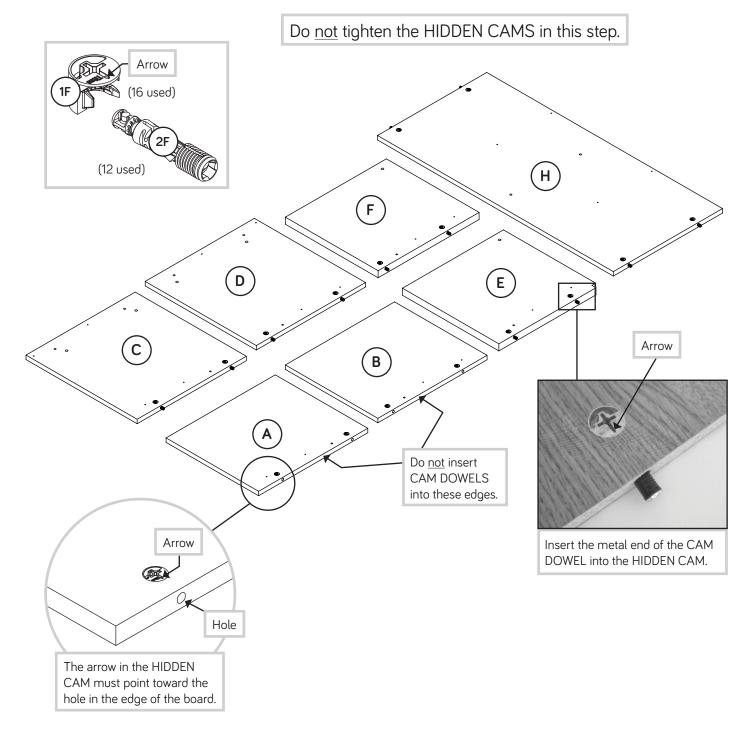


Fasten eight DOOR SLIDES (37M) to the ENDS (A and B), LOWER ENDS (C and D), and UPRIGHTS (E and F). Use twelve BROWN 7/16" LARGE HEAD SCREWS (6S).

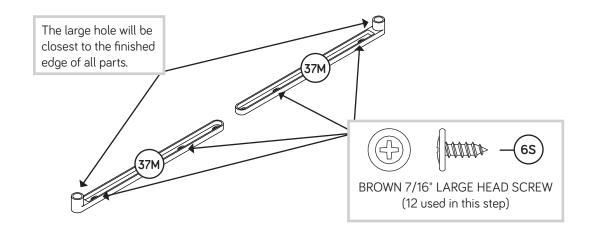


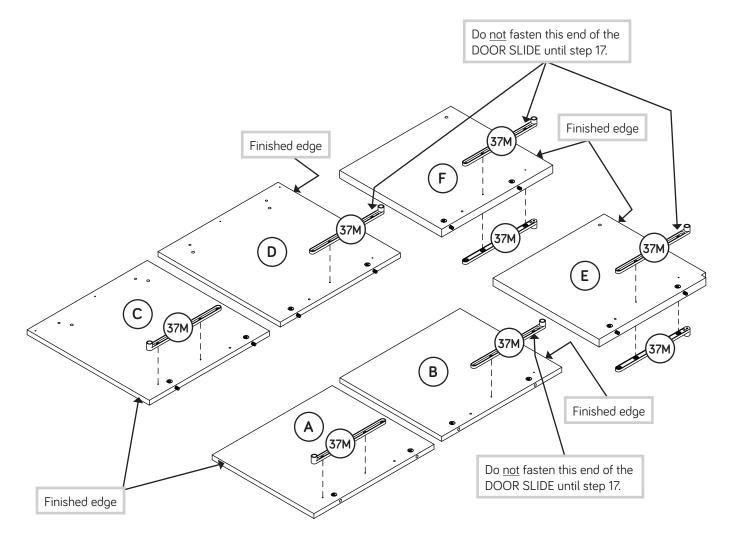


Fasten the RAILS (R and S) to the TOP (G2). Use seven BLACK 1-7/8" FLAT HEAD SCREWS (2S).

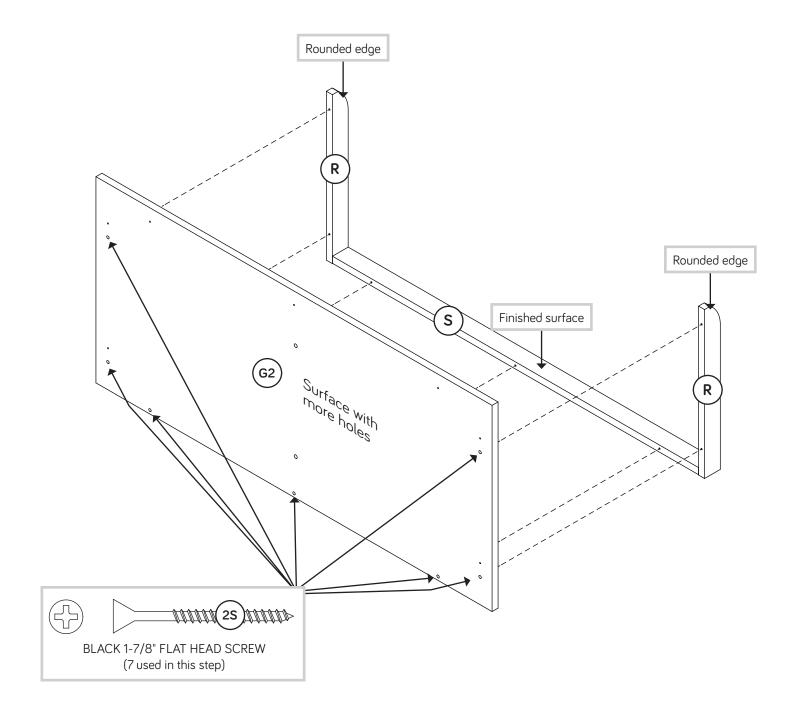


Tap two MOLDING CONNECTORS (19F) into the notches in the MOLDINGS (M, N, and O).

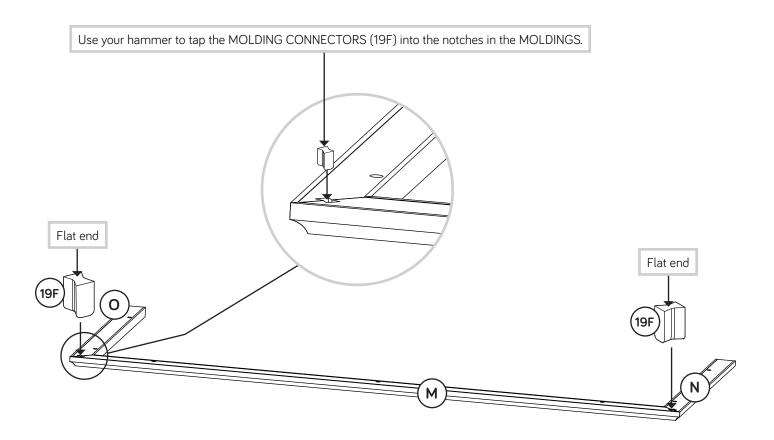


- Fasten the MOLDINGS (M, N, and O) to the TOP (G2). Use seven SILVER 1-1/8" FLAT HEAD SCREWS (10S).
- NOTE: Do <u>not</u> over tighten the SCREWS into the TOP.

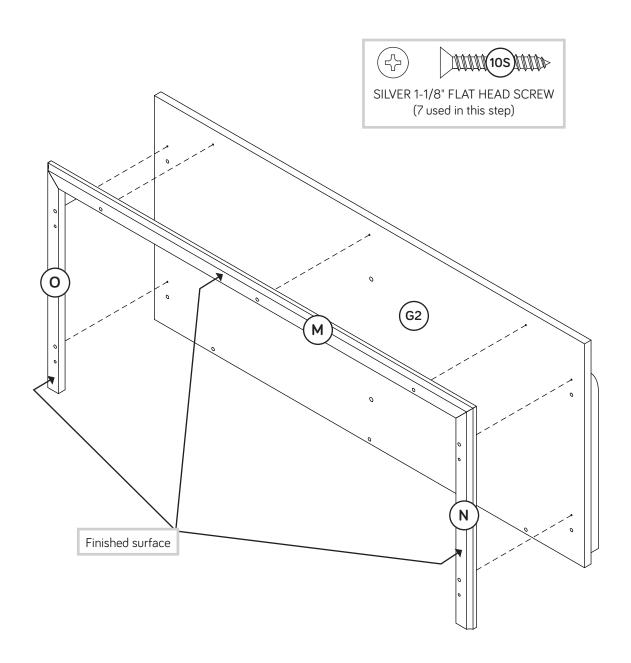

Turn four CAM SCREWS (8F) into the MOLDINGS (N and O).

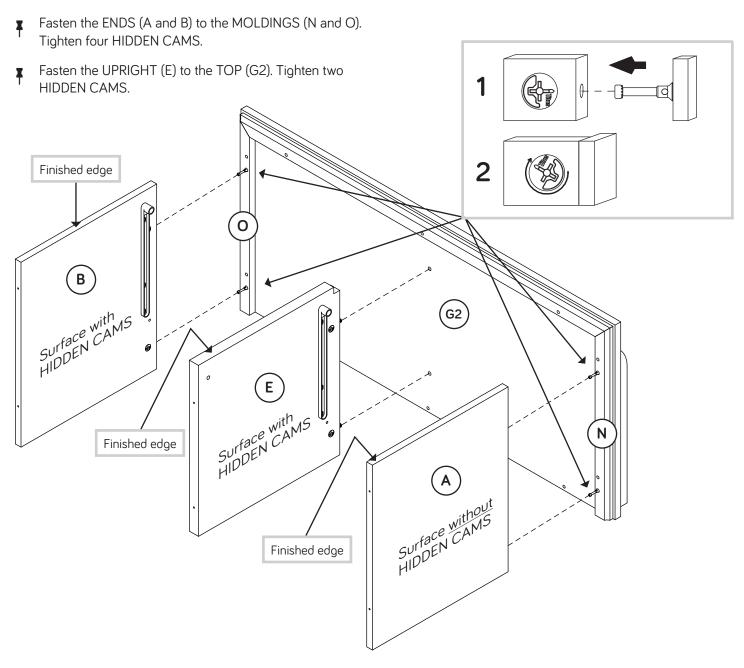


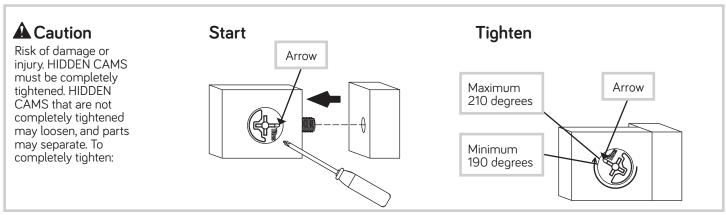


Fasten the SHELF (I) to the ENDS (A and B) and UPRIGHT (E). Use six BLACK 1-7/8" FLAT HEAD SCREWS (2S).




Do <u>not</u> stand the unit upright without the BACK fastened. The unit may collapse.

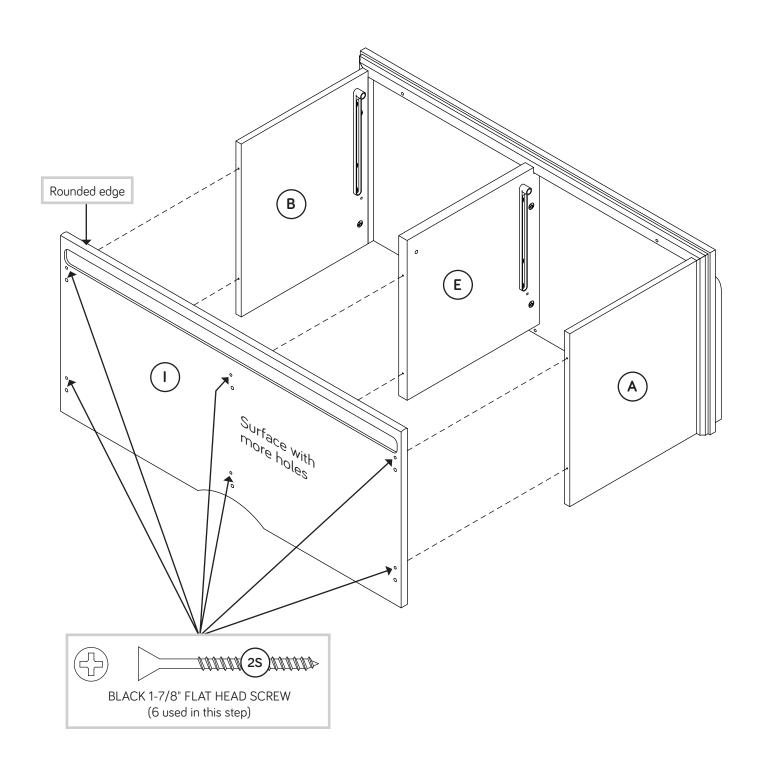



Fasten the LOWER ENDS (C and D) and LOWER UPRIGHT (F) to the SHELF (I). Tighten six HIDDEN CAMS.

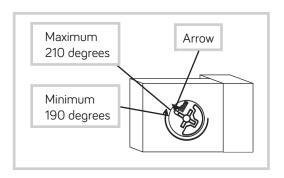


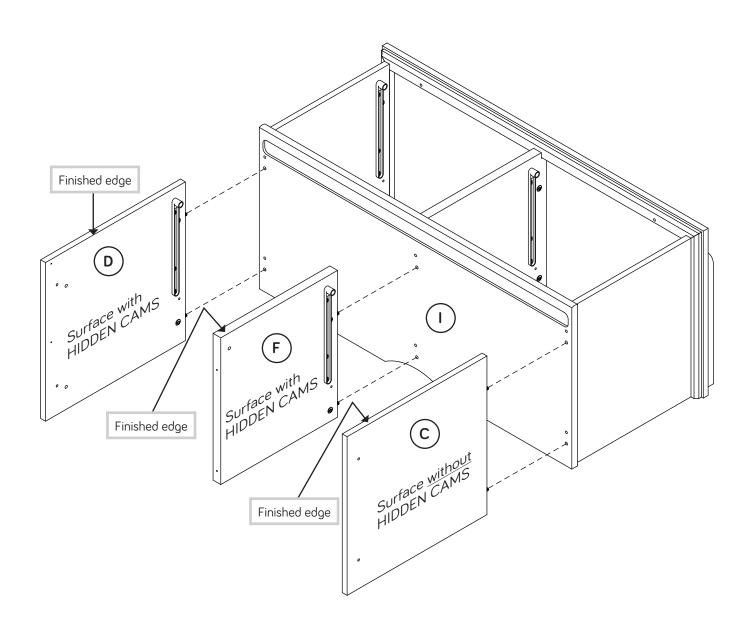


- Fasten the BOTTOM (H) to the LOWER ENDS (C and D). Tighten four HIDDEN CAMS.
- Fasten the BOTTOM (H) to the LOWER UPRIGHT (F). Use two BLACK 1-7/8" FLAT HEAD SCREWS (2S)

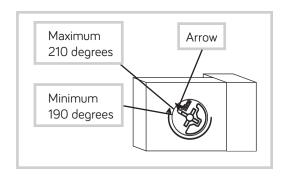


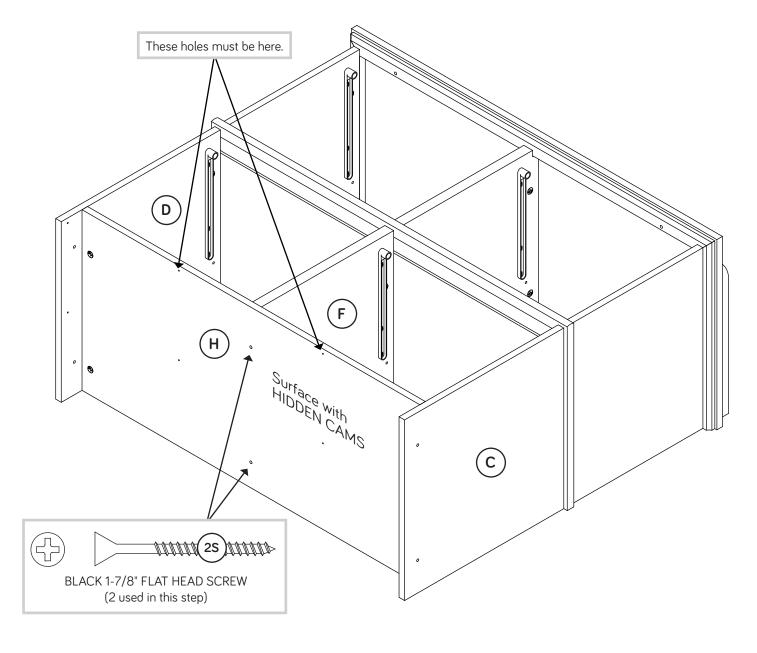

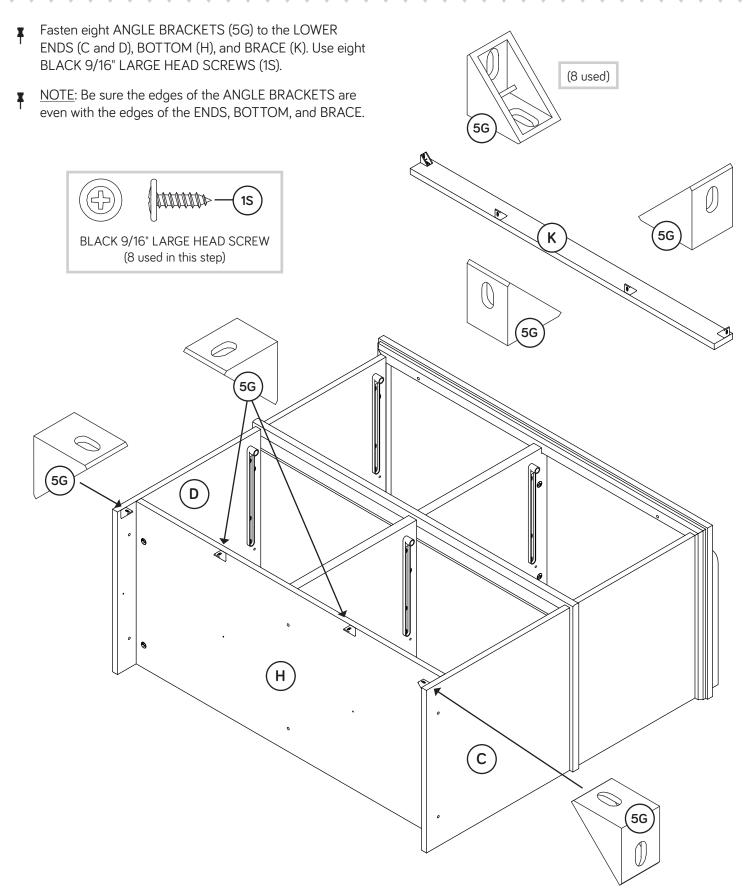

 - Carefully turn your unit over onto its front edges.
- Fasten the BRACE (K) to the LOWER ENDS (C and D) and BOTTOM (H). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).

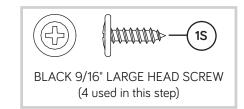


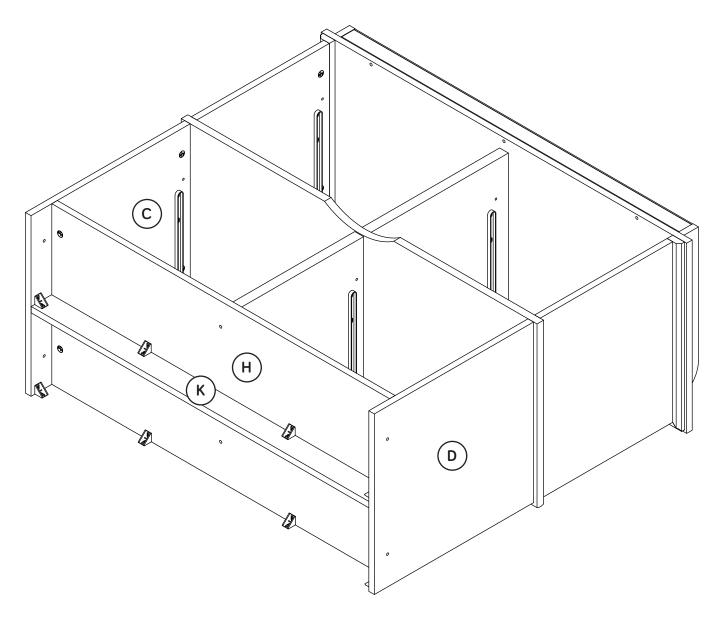


- Unfold the BACK (J) and lay it over your unit.
- Make equal margins along all two long edges and the two short edges of the BACK (J). Push on opposite corners of your unit if needed to make it "square".
- Fasten the BACK (J) to your unit using the NAILS (1N). I
- NOTE: Be sure to tap NAILS into the holes that line up over the SHELF (I).
- NOTE: Perforations have been provided for access




Do not stand the unit upright without the BACK fastened. The unit may collapse.

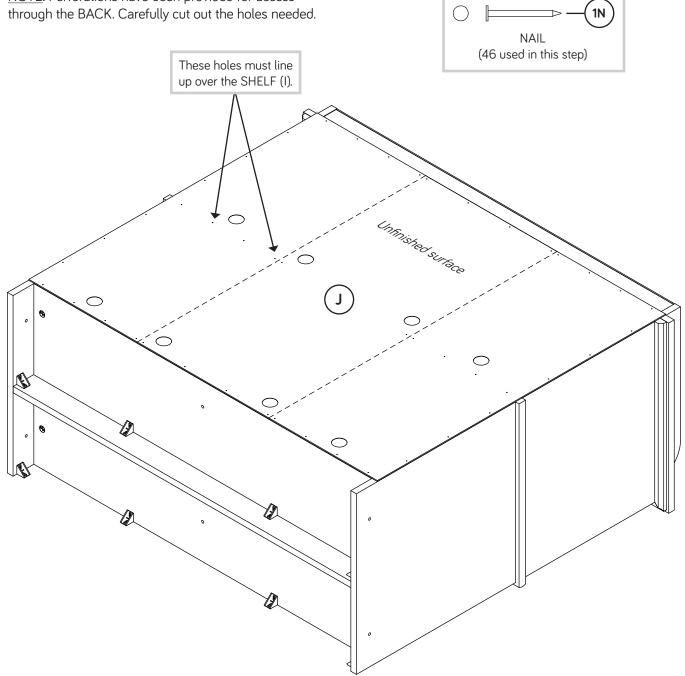


- Fasten the FRONT BASE (P2) to the ENDS (C and D) and BOTTOM (H). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).
- Fasten the SIDE BASES (Q) to the LOWER ENDS (C and D). Use four BROWN 1" FLAT HEAD SCREWS (12S).

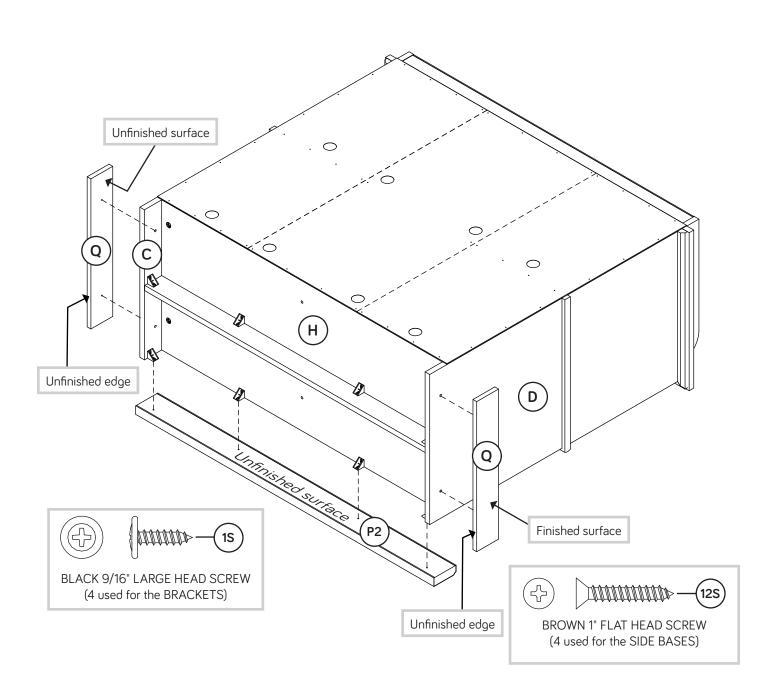


- **▼** Carefully stand your unit upright.
- Push four DOOR STOPS (4I) into the holes in the UPRIGHTS (E and F).
- Push the RUBBER SLEEVES (2R) over the METAL PINS (1R). Insert the METAL PINS into the holes in the ENDS (A, B, C and D) and UPRIGHTS (E and F). These are used for door stops when the DOORS are open.

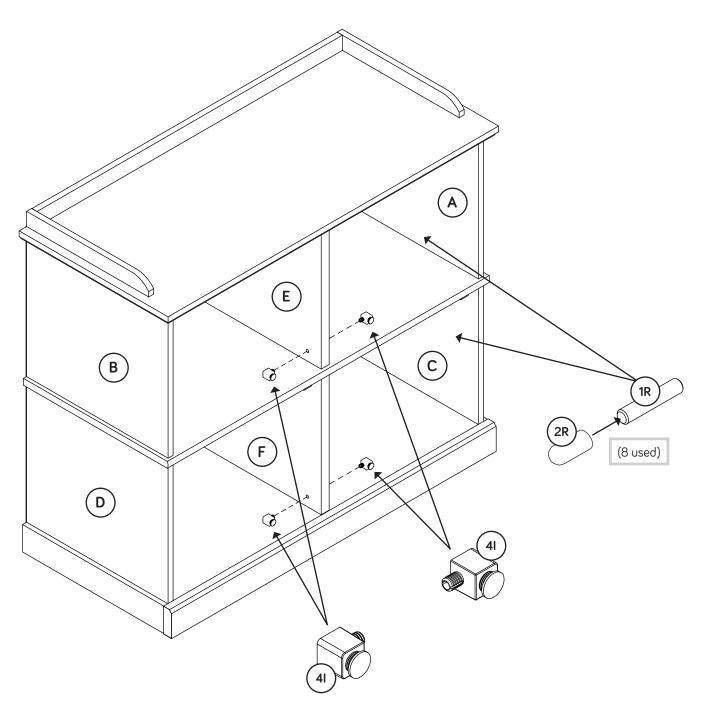


- Fasten a PULL (70K) to a DOOR (L). Use two GOLD 1" MACHINE SCREWS (50S).
- Fasten two DOOR HANGERS (40G) to the DOOR. Use two BLACK 9/16" LARGE HEAD SCREWS (1S).
- Repeat this step for the other DOORS.

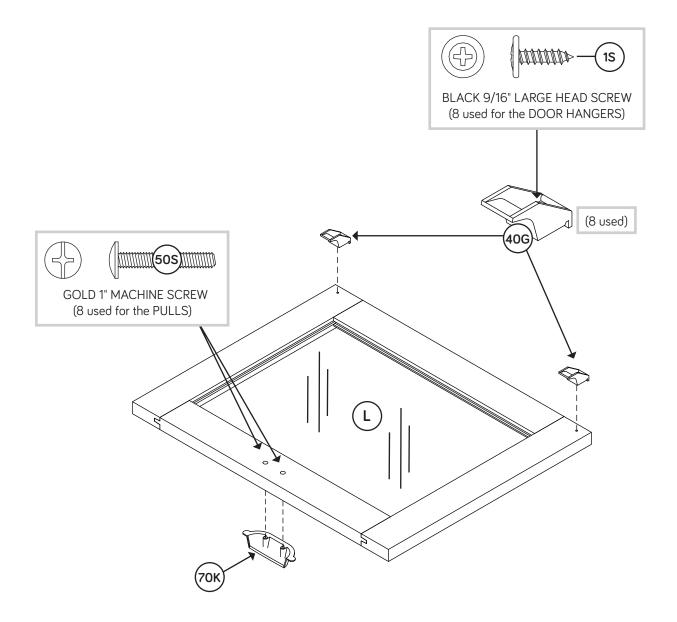

- Before you begin fastening the remaining DOOR SLIDES (37M), you must insert the DOOR (L) at an angle placing the DOOR HANGERS behind the large hole on the DOOR SLIDES. Push the door into the unit horizontally.
- While holding the DOOR, swing the DOOR SLIDE up into place and fasten it using a BROWN 7/16" LARGE HEAD SCREW (6S).
- Repeat this step to hang the remaining DOORS.

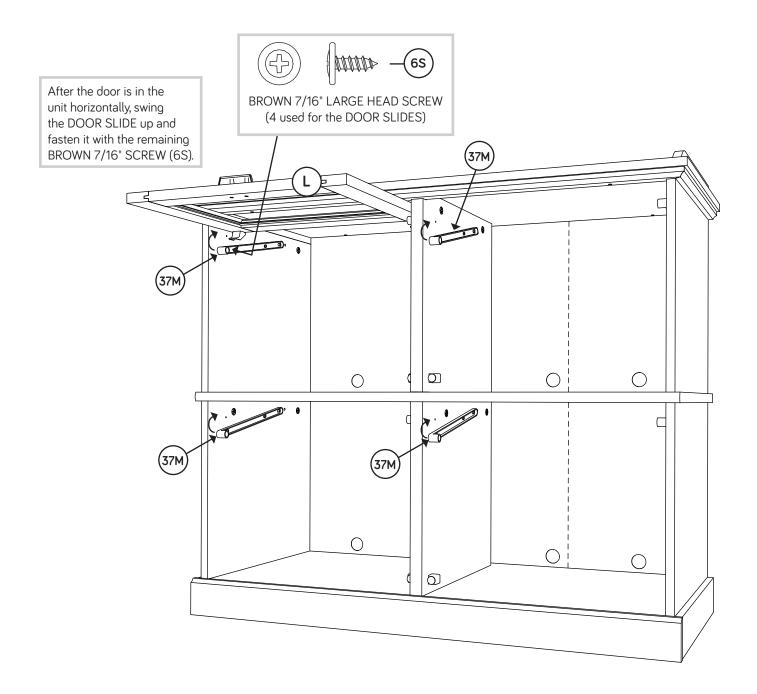

- Apply the WARNING LABEL (1L) to the TOP (G2). You should be able to read the label when the TV is removed from the unit. When the TV is in place, it should hide the label. Peel off the backing and apply the label as shown in the diagram.
- NOTE: This is a permanent label intended to last for the life of the product. Once applied, do <u>not</u> try to remove it.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

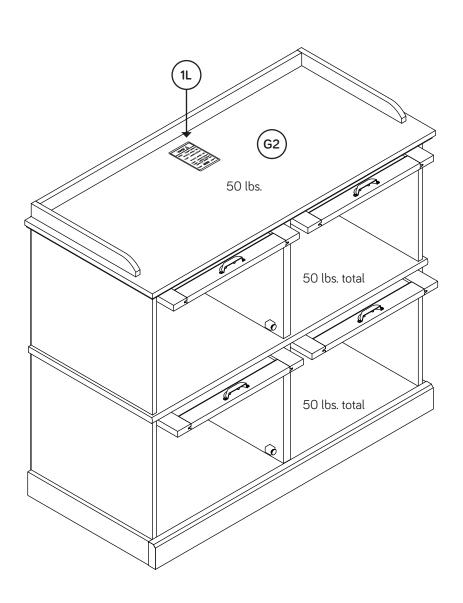

#### **WARNING**

Never use this furniture with a TV that is too large or too heavy. Severe injury or death can occur. The TV and furniture will be unstable and may tip.

-The TV **must** weigh less than **50 lbs**. -The base of the TV **must** be able to sit completely on this shelf.

Refer to instruction book for complete safety information.

<u>Note</u>: This is a <u>permanent</u> label. Do not try to remove. Surface will be damaged.

#### 

08/05 269220 269220

#### **▲** WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following safety information.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result may tip over onto the child.

**NEVER** allow children to climb or play with the TV or furnishing supporting the TV.

**NEVER** place toys, food, remote, etc. on top of the TV or TV furnishing.

**ALWAYS** use either the safety hardware as instructed or other wall anchoring device.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or over turning onto a child.

**NEVER** place a TV on furniture that is not intended to support a TV.

**NEVER** exceed the maximum size and weight of the TV shown in the instructions.

Be sure to apply the TV warning label as shown in the instructions.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

**NEVER** exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible.

Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

**ALWAYS** unload shelves and drawers, starting with the top surfaces, before moving.

**NEVER** push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it.