


www.teknikoffice.co.uk

Teknik

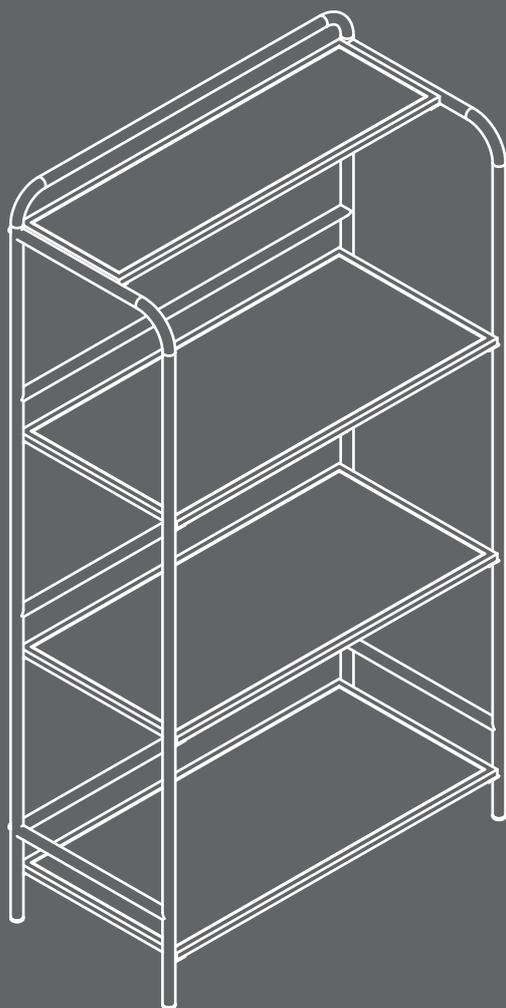

For things 'n such.


Rectangular Bookcase/DisplayUnit

Boulevard Cafe Collection | **Model 5421950**


Table of Contents

Assembly Tools Required

Part Identification	3
Hardware Identification	2
Assembly Steps	4-8
Safety	13-14

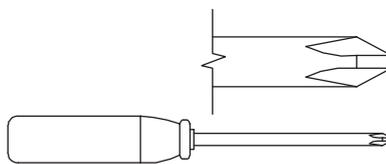

No. 2 Phillips Screwdriver
Tip Shown Actual Size

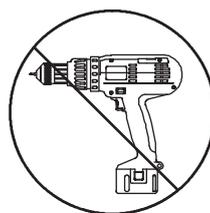

Skip the power trip.
This time.

 
Hardware Identification

⚠ Screws are shown actual size. You may receive extra hardware with your unit.


1 BUMPER - 24




2 ALLEN WRENCH - 1

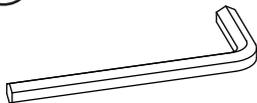


99 FURNITURE TIPPING RESTRAINT KIT - 1

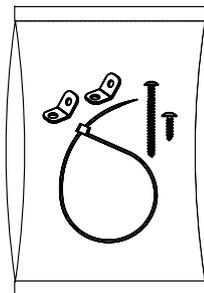

3 BLACK 1-3/8" ALLEN HEAD SCREW - 4

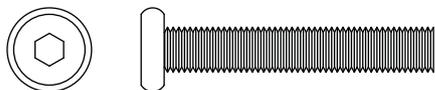 

4 BLACK 3/8" MACHINE SCREW - 16

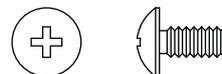 


Part Identification

Now you know
our ABCs.



† While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

A	RIGHT END (1)
B	LEFT END (1)
C	BACK (1)
D	TOP FRAME (1)
E	SHELF FRAME (3)
F	TOP GLASS SHELF (1)
G	GLASS SHELF (3)

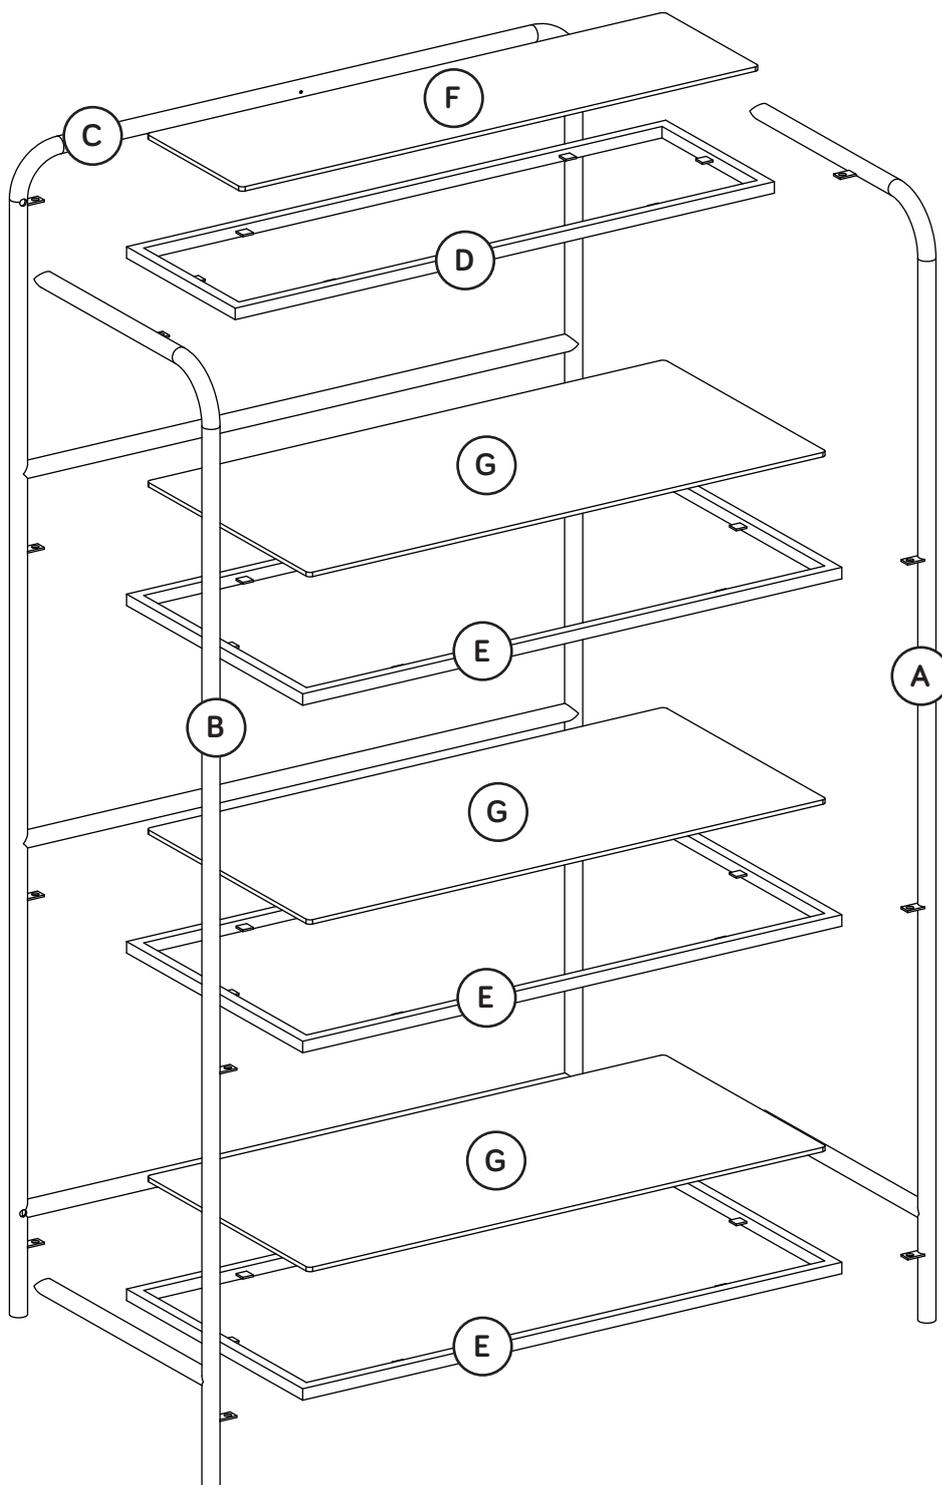



Step 1

- ⚡ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ⚡ Fasten the ENDS (A and B) to the BACK (C). Use four BLACK 1-3/8" ALLEN HEAD SCREWS (3) with the ALLEN WRENCH (2).



Some assembly
(and snacks) required.

 

The hole
must be here.

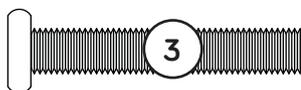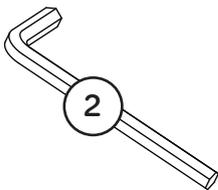

BLACK 1-3/8" ALLEN HEAD SCREW
(4 used in this step)

Step 2

- ✚ Carefully lay your unit on its back.
- ✚ Fasten the FRAMES (D and E) to the ENDS (A and B) and BACK (C). Use sixteen BLACK 3/8" MACHINE SCREWS (4) through the tabs on the ENDS and BACK and into the holes in the FRAMES.
- ✚ NOTE: You may want to start each SCREW a few turns before completely tightening any of them.

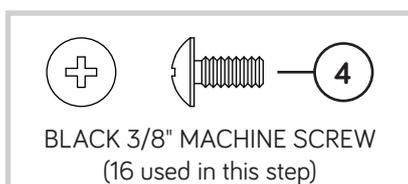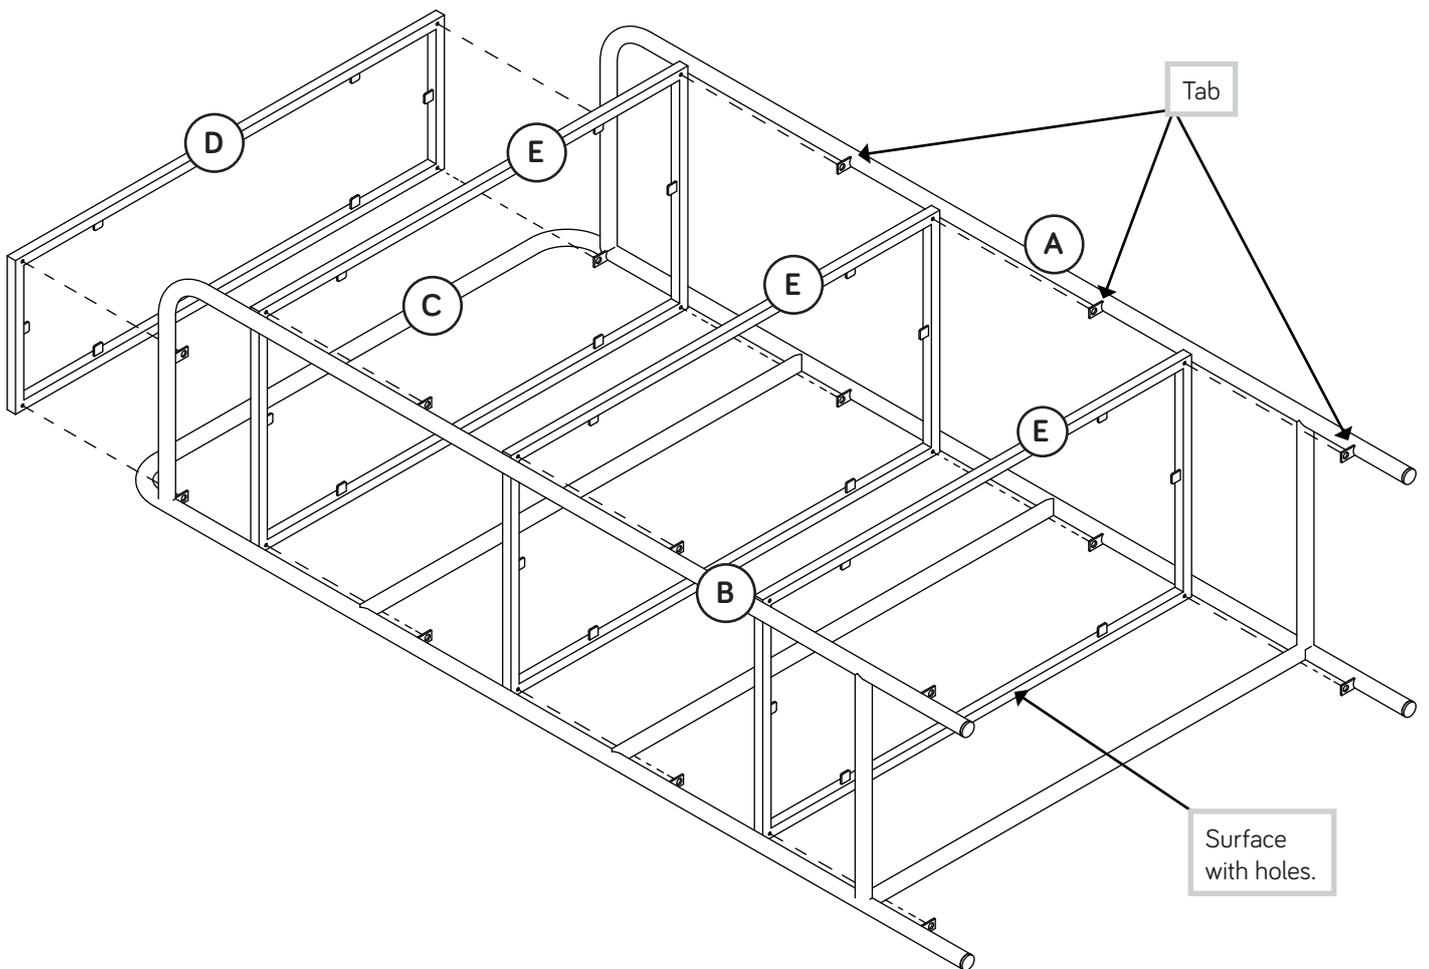


Step 3

- ⚡ Carefully stand your unit upright.
- ⚡ Stick a BUMPER (1) onto each tab on the FRAMES (D and E).



Pro Tip: Lift with your legs. And, you know, your arms.

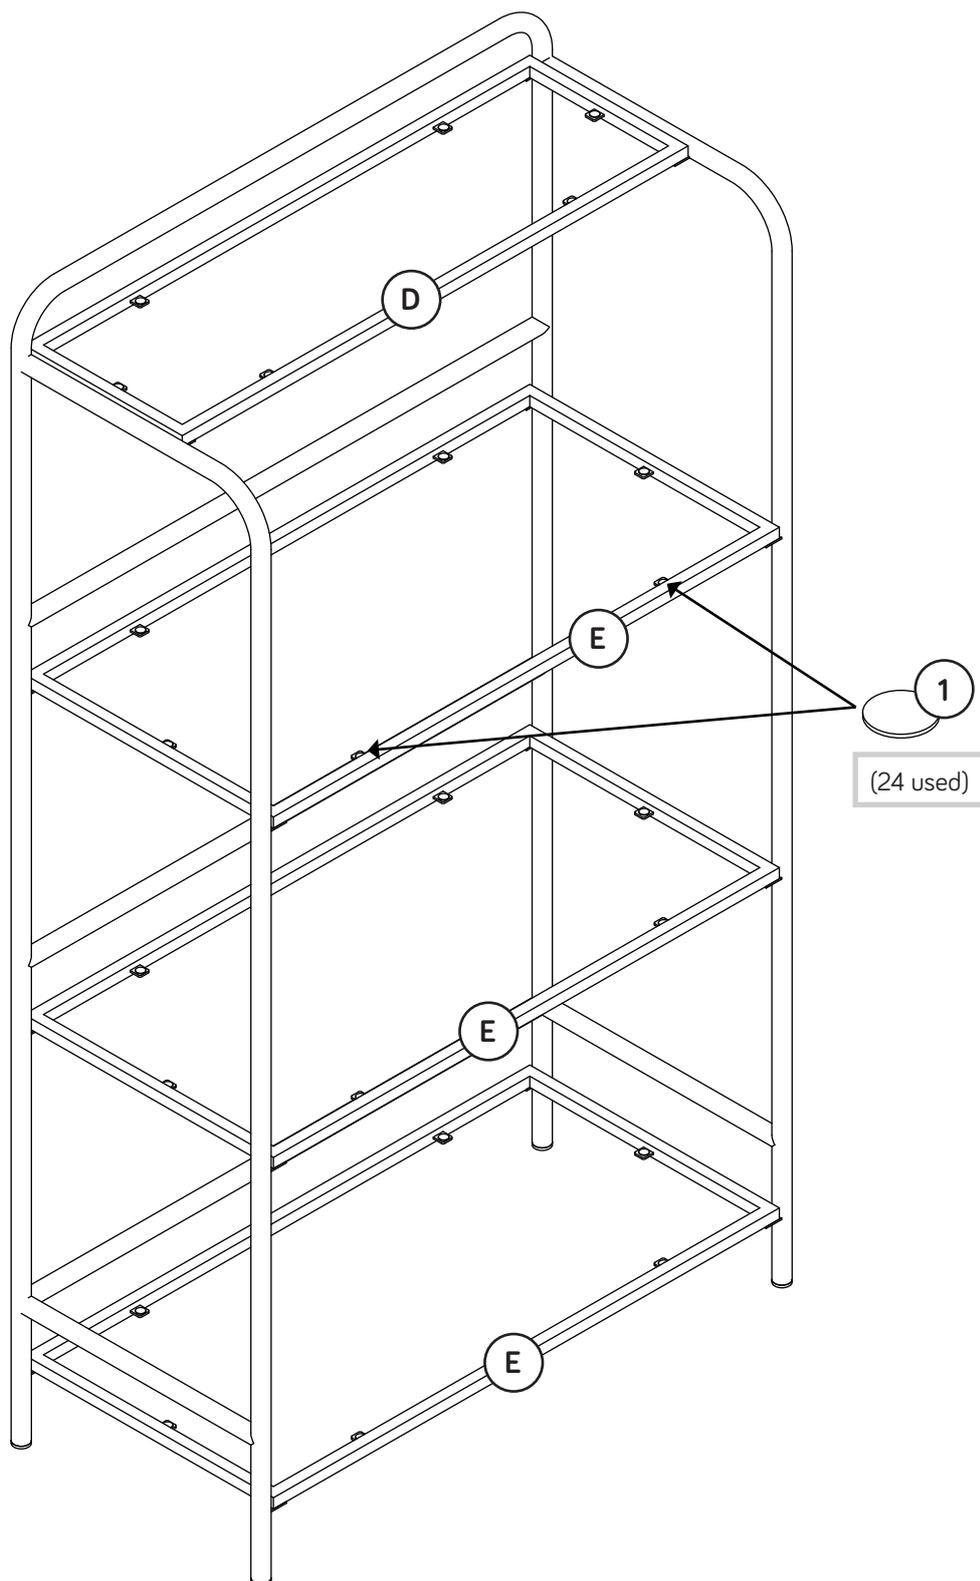

Step 4


⚠ Caution

Tempered safety glass is used. It is stronger than normal glass, and it will not break into long, sharp, knife-like shards. However, safety glass **can break**. When safety glass breaks, it instantly fractures into small, bead-like pieces. These small pieces may have sharp edges.

For your safety, follow these precautions when you assemble your product:

- Wear safety glasses or other eye protection.
- Do not try to drill into or cut safety glass. It will instantly break into small pieces.
- Do not force the glass into position.
- If the glass breaks, be careful when you pick up the pieces. They may have sharp edges.


🔩 Carefully place the GLASS SHELVES (F and G) onto the tabs on the FRAMES (D and E).

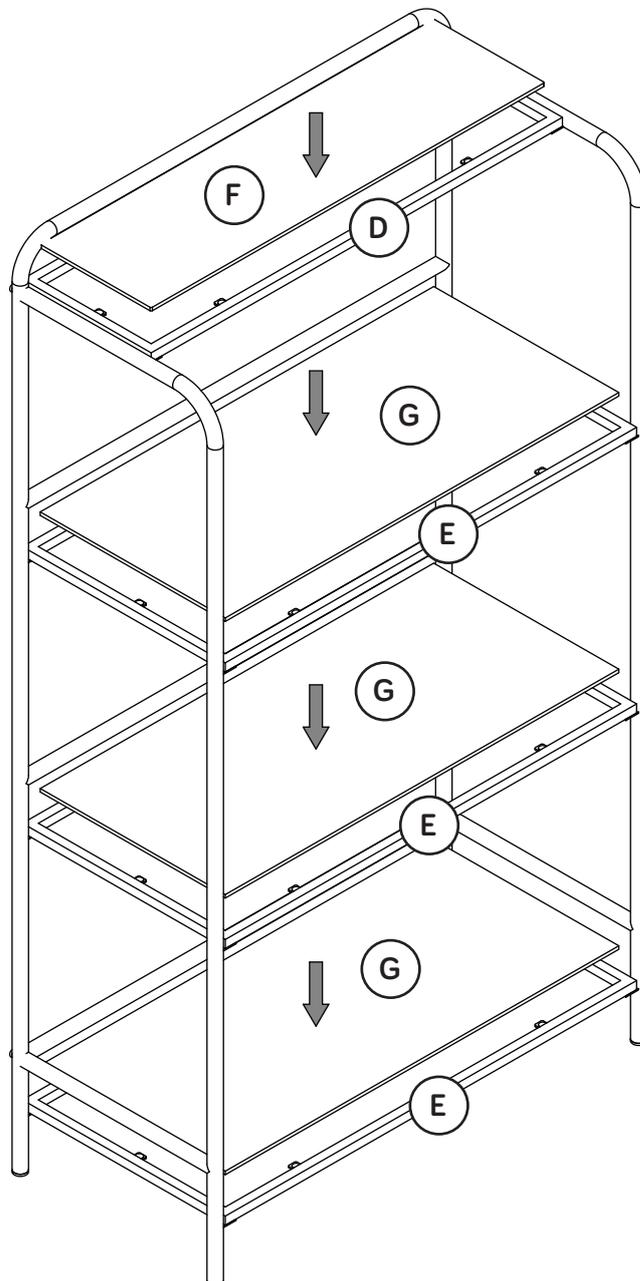

Step 5

- ✚ We recommend using the FURNITURE TIPPING RESTRAINT KIT (99) for added stability. Fasten a bracket to the back edge of the BACK (C) using the 5/8" screw as shown.
- ✚ Place your unit in its final location against a wall.
- ✚ Follow the instructions included in the KIT to fasten your unit to the wall.
- ✚ NOTE: Please read the back pages of the instruction booklet for important safety information.
- ✚ This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

Use the 5/8" screw through the small hole in a bracket and into the back edge of the TOP FRAME (B).

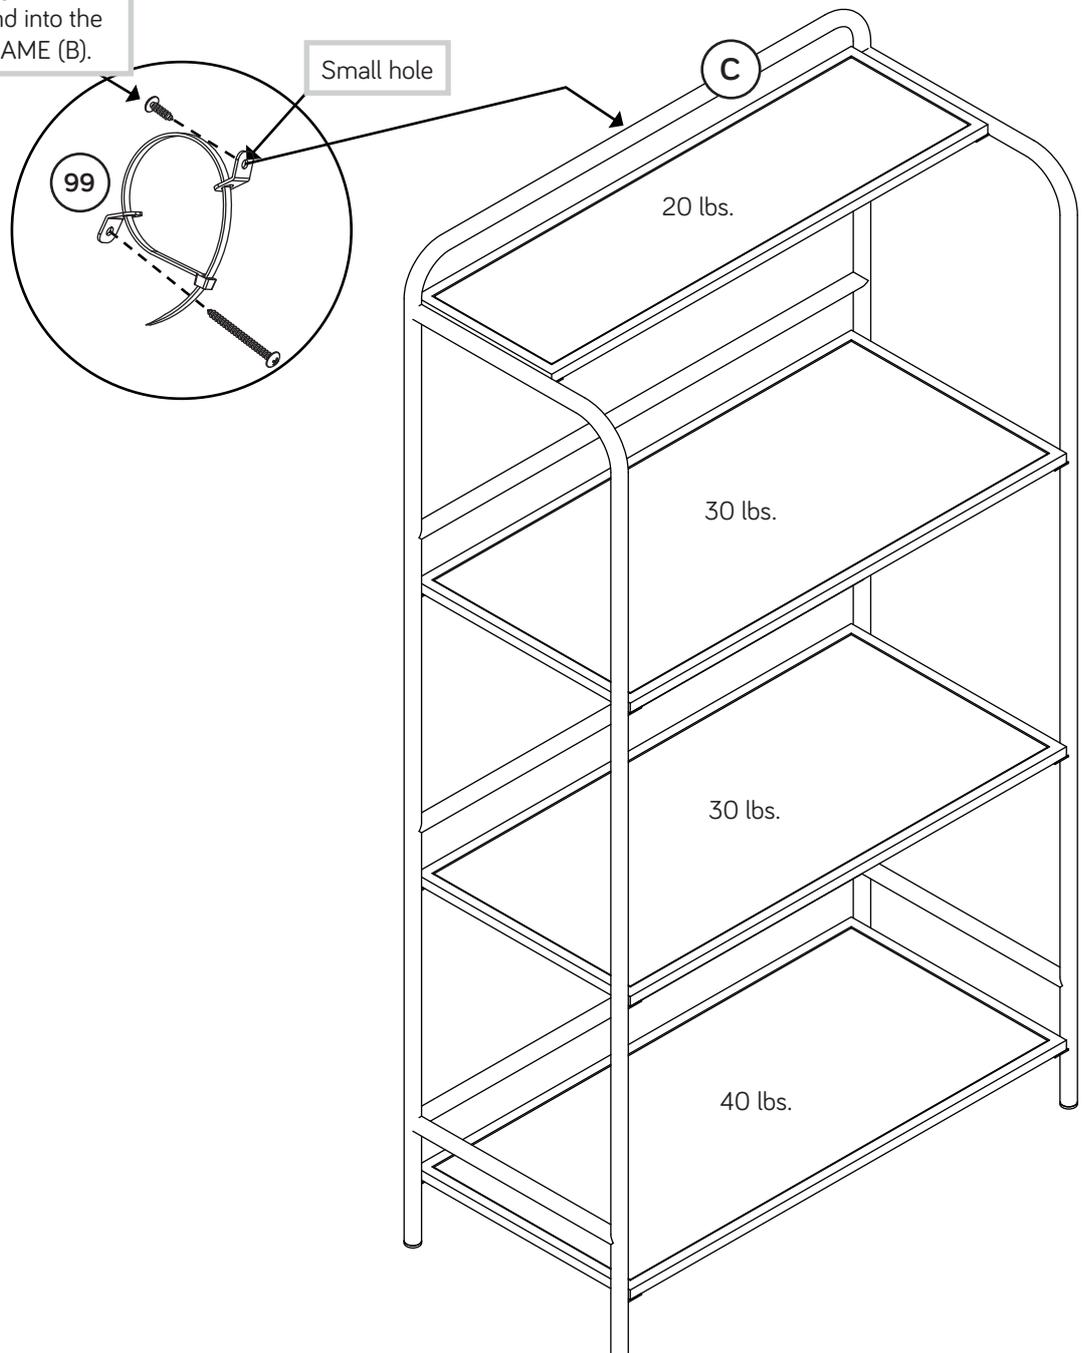

⚠ WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. ***Carefully read the following chart.***

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none"> Overloaded shelves. Improper loading can cause the product to be top-heavy. 	<ul style="list-style-type: none"> Risk of injury. Top-heavy furniture can tip over. Overloaded shelves can break. 	<ul style="list-style-type: none"> Never exceed the weight limits shown in the instructions. Work from bottom to top when loading shelves. Place the heavier items on the lower shelves.
<ul style="list-style-type: none"> Improperly moving furniture that is not designed and equipped with casters. 	<ul style="list-style-type: none"> Furniture can tip over or break if improperly moved. Physical injury. Furniture can be very heavy. 	<ul style="list-style-type: none"> Unload shelves from top to bottom before moving the furniture. Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place. This unit must be positioned against a wall.
<ul style="list-style-type: none"> Children climbing on the shelves can cause the product to tip. 	<ul style="list-style-type: none"> Risk of injury or death. 	<ul style="list-style-type: none"> Do not allow children to climb on the shelves. Avoid placing items like toys or candy on upper shelves. Use the supplied tipping restraint kit for added stability.
<ul style="list-style-type: none"> Placing TVs on furniture items that are not designed to support a television is hazardous. 	<ul style="list-style-type: none"> Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward. 	<ul style="list-style-type: none"> This product is not designed to support a television.