

Coffee Table

City Centre Collection | Model 5425852


NOTE: THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Assembly Tools Required

 Part Identification	2
Hardware Identification	2
Assembly Steps	3
Safety	4




No. 2 Phillips Screwdriver Tip Shown Actual Size

Part Identification


• Use this part identification to help identify the parts.

Α	TOP (1)
В	LEG (4)
С	SHELF (1)

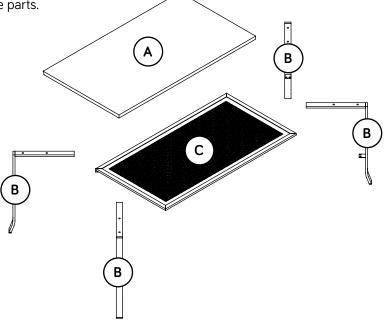

Hardware Identification

 Screws are shown actual size. You may receive extra hardware with your unit.










Step 1

- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- NOTE: Do <u>not</u> completely tighten the SCREWS until the end of this step.
- Fasten the LEGS (B) to the TOP (A). Tighten eight 13/16" HEX HEAD SCREWS (2) using the L-WRENCH (1).
- Fasten the SHELF (C) to the TABS on the LEGS (B). Use eight 3/8" PAN HEAD SCREWS (3).
- NOTE: You should start each SCREW a few turns to help line up the holes.
- Completely tighten all of the SCREWS and stand your unit upright.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

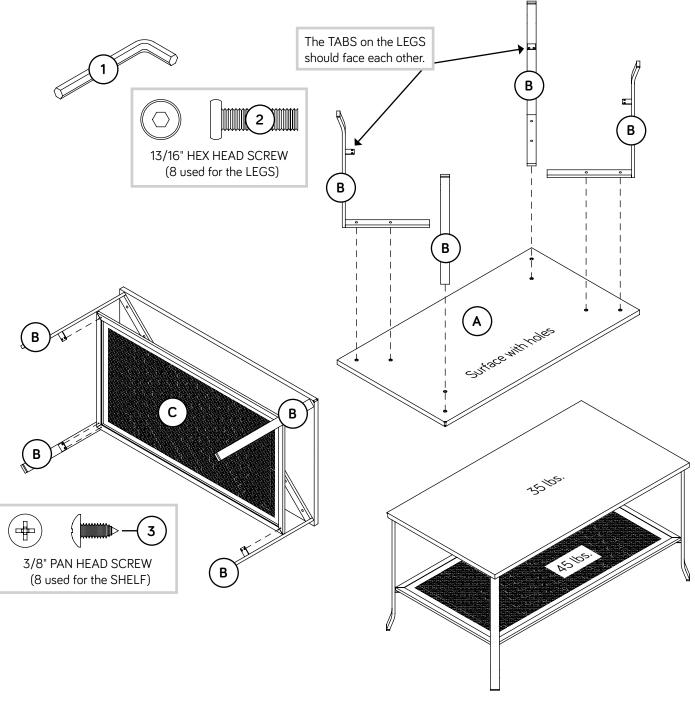

▲ WARNINGPlease use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. *Carefully read the following chart*.

Look out for:	What can happen:	How to avoid the problem:
Overloaded shelves.	 Risk of injury. Top-heavy furniture can tip over. Overloaded shelves can break. 	 Never exceed the weight limits shown in the instructions. Work from bottom to top when loading shelves. Place the heavier items on the lower shelves.
Placing TVs on furniture items that are not designed to support a television is hazardous.	Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	This product is not designed to support a television.