

Knick-knack
paddywhack,
give your **stuff** a home.

Storage Hutch

Craft Collection | Model 5421414


NOTE: THIS INSTRUCTION
BOOKLET CONTAINS **IMPORTANT**
SAFETY INFORMATION.

PLEASE READ AND KEEP FOR
FUTURE REFERENCE.


Table of Contents

Assembly Tools Required


| | |
|-------------------------|-------|
| Part Identification | 3 |
| Hardware Identification | 4 |
| Assembly Steps | 5-14 |
| Français | 15-17 |
| Español | 18-20 |
| Safety | 21-22 |
| Warranty | 23 |

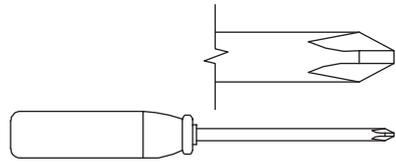

 No. 2 Phillips Screwdriver
Tip Shown Actual Size



Short Screwdriver

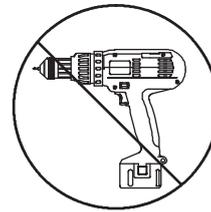

Skip the power trip.
This time.

Part Identification

Now you know
our ABCs.




↑ While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

| | |
|---|----------------------|
| A | RIGHT END (1) |
| B | LEFT END (1) |
| C | TOP (1) |
| D | ADJUSTABLE SHELF (1) |

| | |
|---|-----------------|
| E | SHELF (1) |
| F | LOWER SHELF (1) |
| G | BACK (1) |
| H | PEG BOARD (1) |

| | |
|---|-----------------|
| I | TOP MOLDING (1) |
| J | LOWER BRACE (1) |
| K | LEFT DOOR (1) |
| L | RIGHT DOOR (1) |

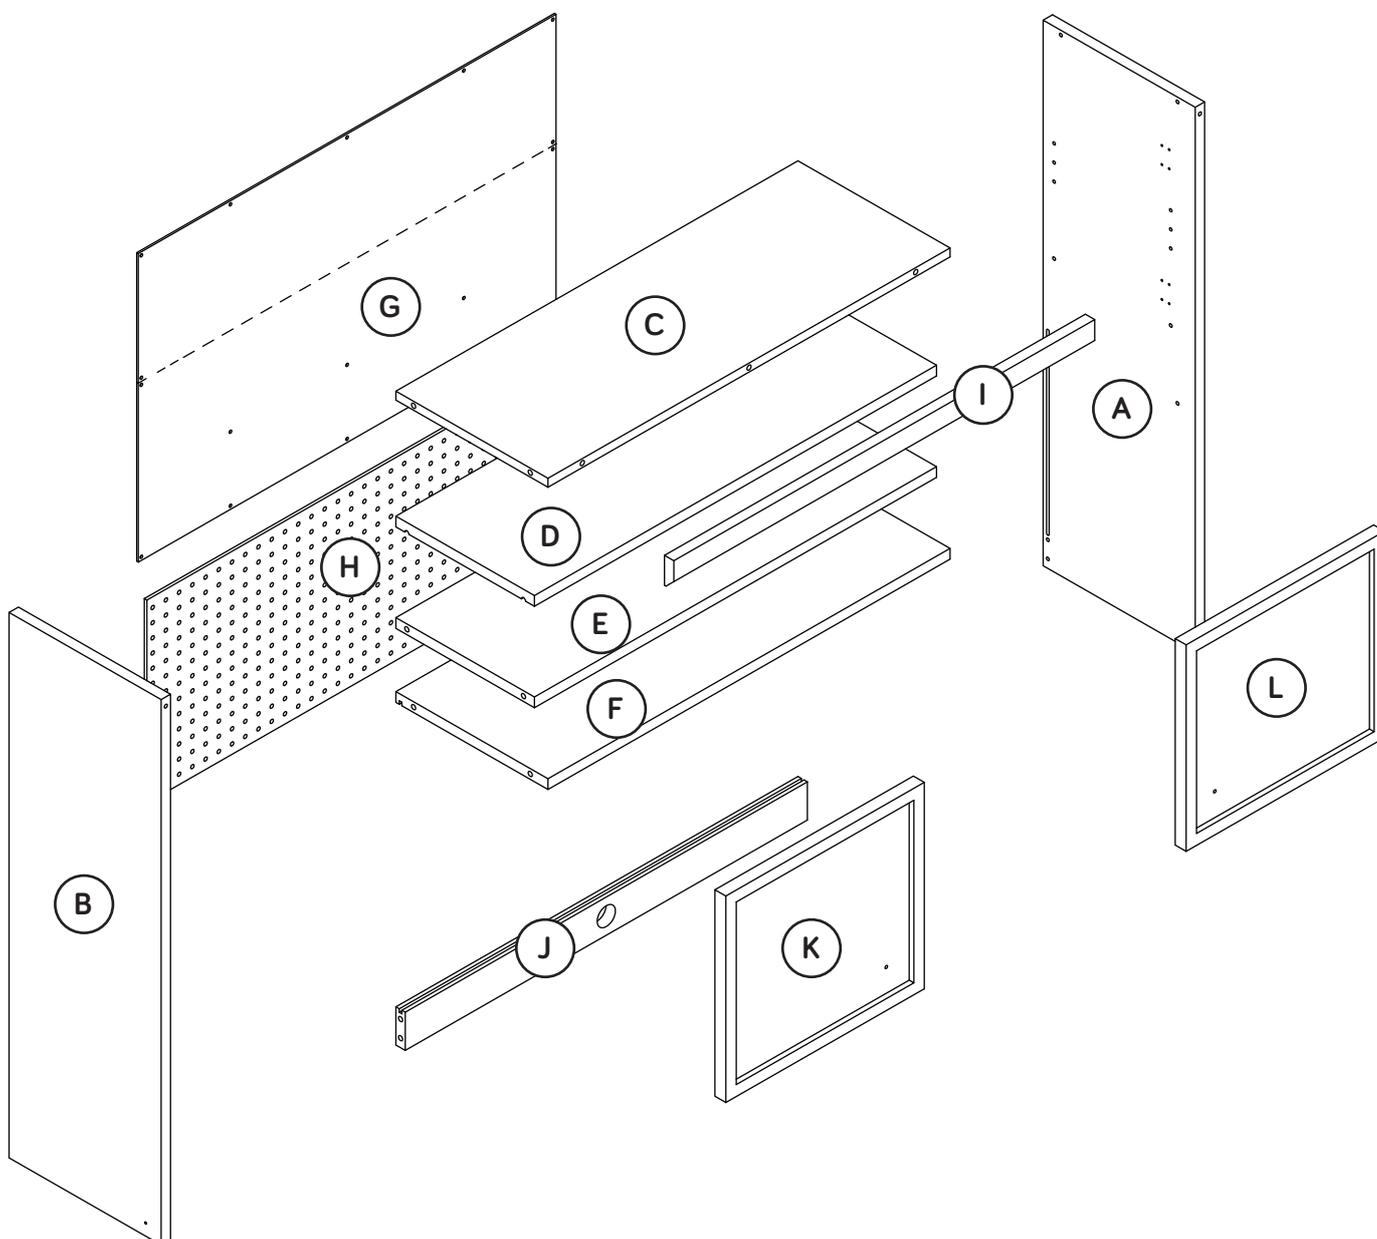


Hardware Identification

† Screws are shown actual size. You may receive extra hardware with your unit.


1 HIDDEN CAM - 17




2 CAM SCREW - 17

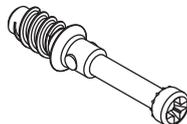


3 WOOD DOWEL - 4

 


4 KNOB - 2

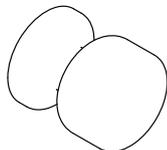


5 CAM COVER CARD - 3

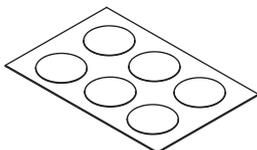


6 HINGE - 4

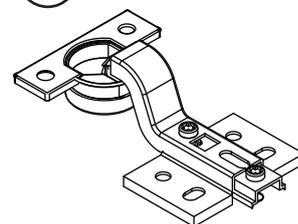


7 METAL PIN - 4

 


8 RIGHT CONNECTOR PLATE - 1

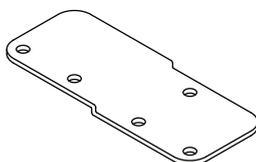


9 LEFT CONNECTOR PLATE - 1

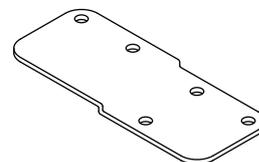

10 SILVER 7/8" MACHINE SCREW - 2

 


11 SILVER 13/16" PAN HEAD SCREW - 10

 

12 SILVER 1/2" FLAT HEAD SCREW - 40






99 FURNITURE TIPPING RESTRAINT KIT - 1

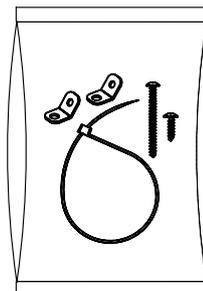

Step 1



- ✚ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ✚ Push seventeen HIDDEN CAMS (1) into the TOP (C), SHELVES (E and F), and LOWER BRACE (J).

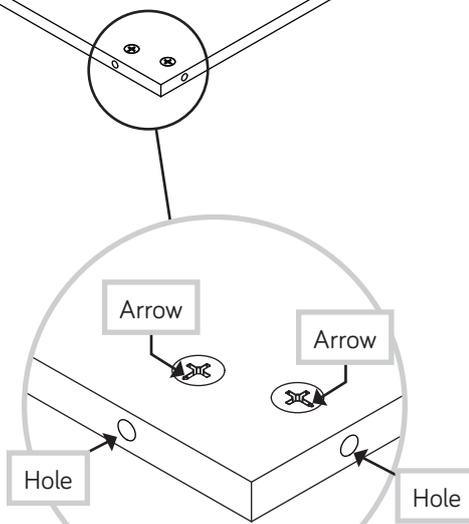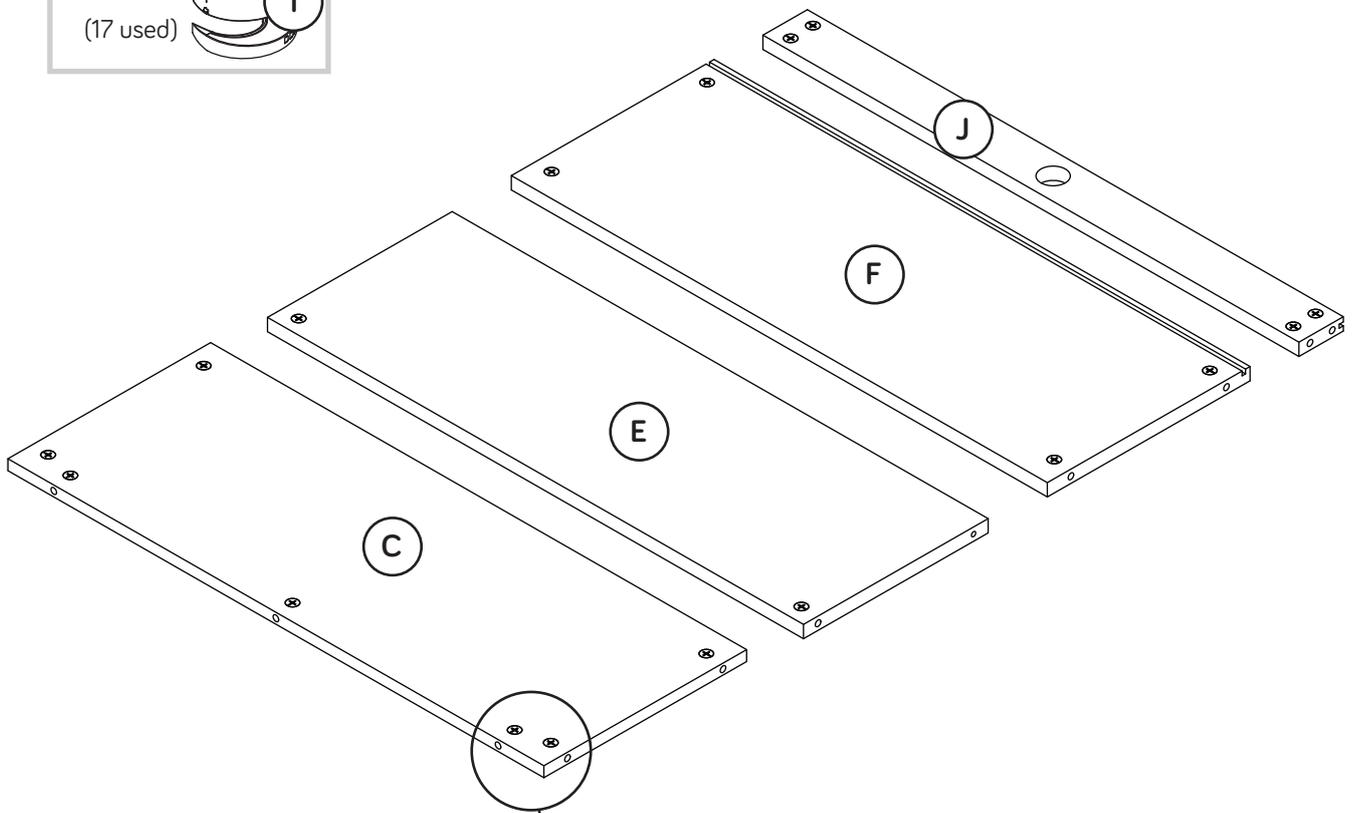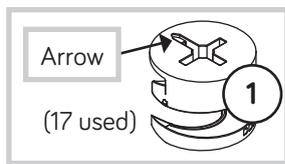

The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.



Step 2

Turn seventeen CAM SCREWS (2) into the ENDS (A and B) and TOP MOLDING (I).

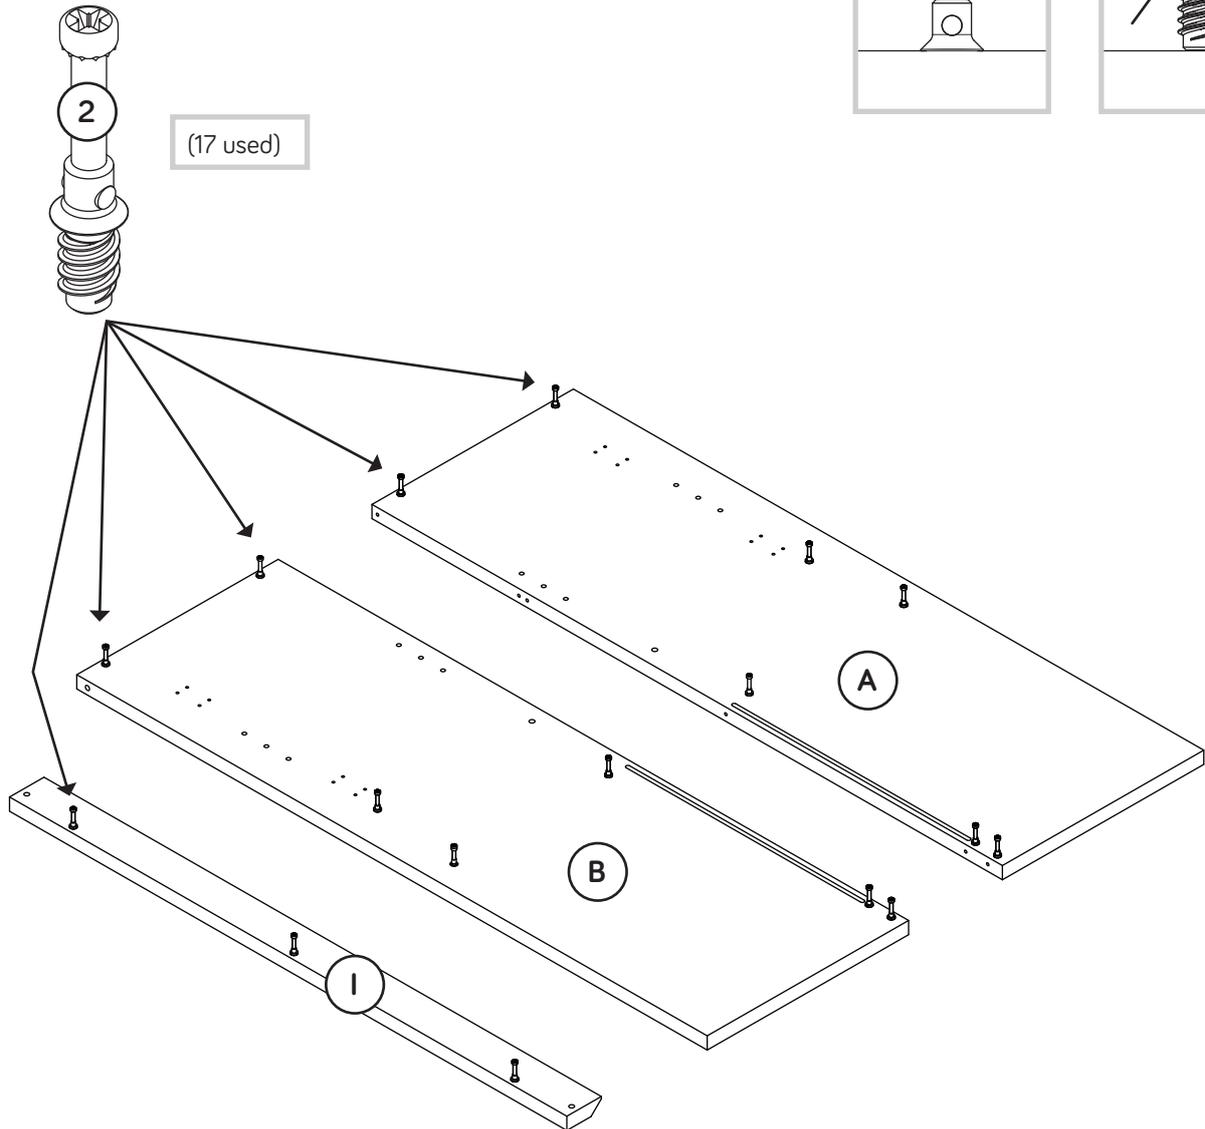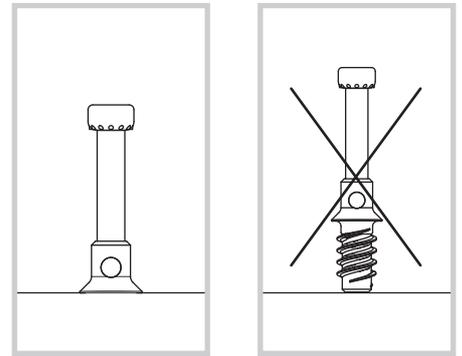



Step 3

- ✚ Insert a WOOD DOWEL (3) into the hole in the LEFT END (B).
- ✚ Fasten the TOP (C) and SHELVES (E and F) to the LEFT END (B). Tighten five HIDDEN CAMS.
- ✚ **NOTE:** Be sure the WOOD DOWEL in the LEFT END (B) inserts into the hole in the SHELF.
- ✚ Push the short edge of the LOWER BRACE (J) over the CAM SCREWS in the LEFT END (B).
- ✚ **NOTE:** The HIDDEN CAMS in the LOWER BRACE (J) will not get tightened until step 6.

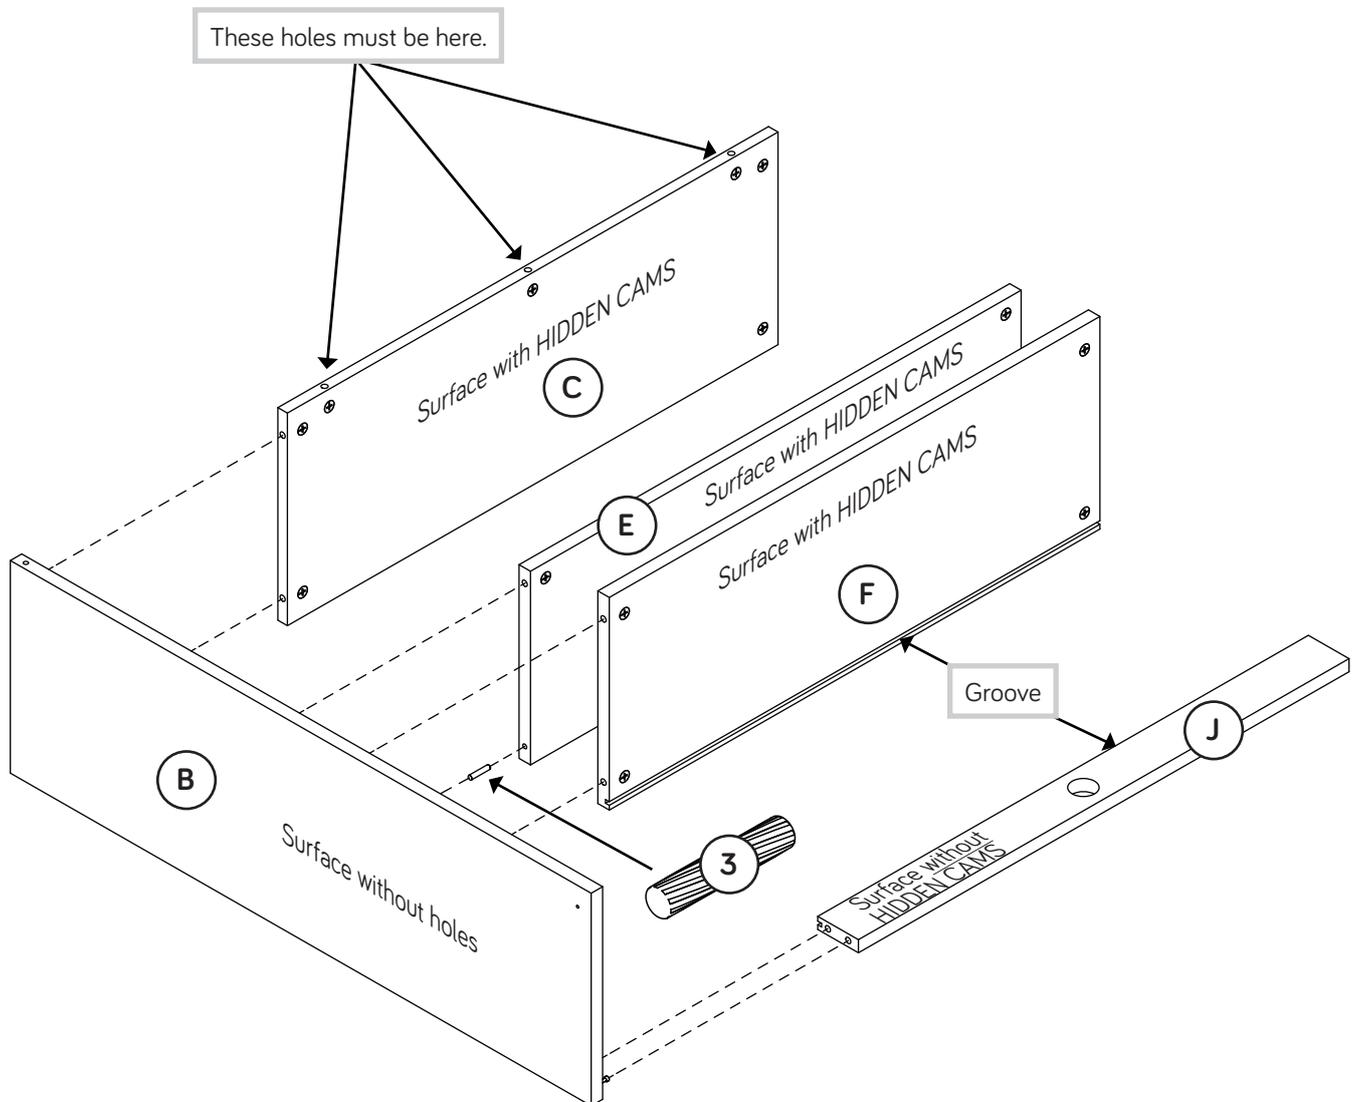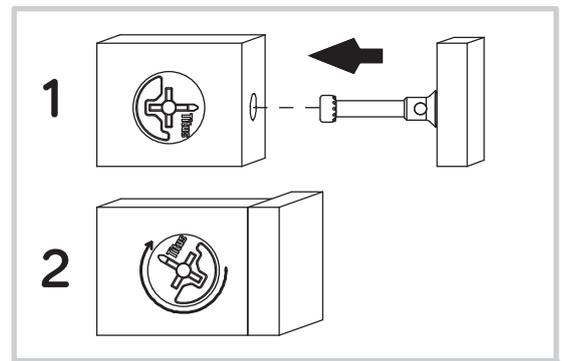




Step 4

- ✚ You will need a short screwdriver in this step.
- ✚ Slide the PEG BOARD (H) into the grooves of the LOWER SHELF (F), LOWER BRACE (J), and LEFT END (B).
- ✚ Insert a WOOD DOWEL (3) into the hole in the RIGHT END (A).
- ✚ Fasten the RIGHT END (A) to the TOP (C) and SHELVES (E and F). Tighten five HIDDEN CAMS.
- ✚ **NOTE:** Be sure the PEG BOARD (H) inserts into the groove of the RIGHT END.
- ✚ **NOTE:** Be sure the WOOD DOWEL and CAM SCREWS in the RIGHT END insert into the SHELF and the LOWER BRACE.
- ✚ **NOTE:** The HIDDEN CAMS in the LOWER BRACE (J) will not get tightened until step 6

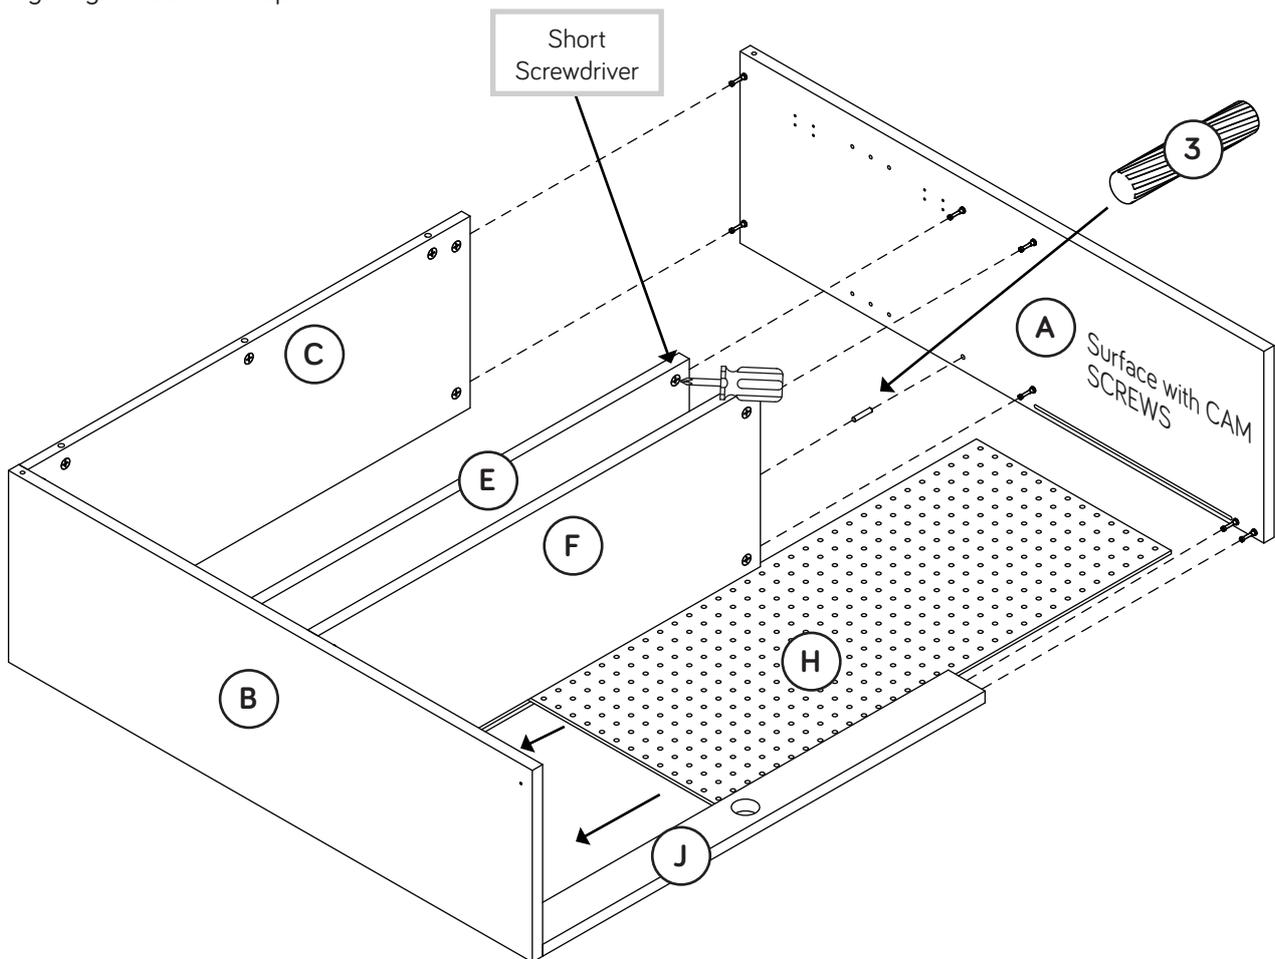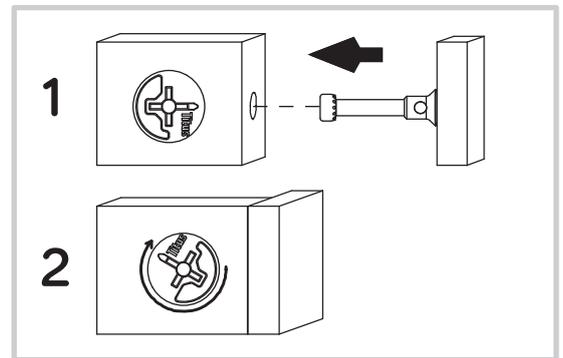


Step 5

- ✚ Insert two WOOD DOWELS (3) into the holes in the TOP MOLDING (I).
- ✚ Fasten the TOP MOLDING (I) to the TOP (C) and ENDS (A and B).
- ✚ **NOTE:** Be sure the WOOD DOWELS in the TOP MOLDING insert into the holes in the ENDS.

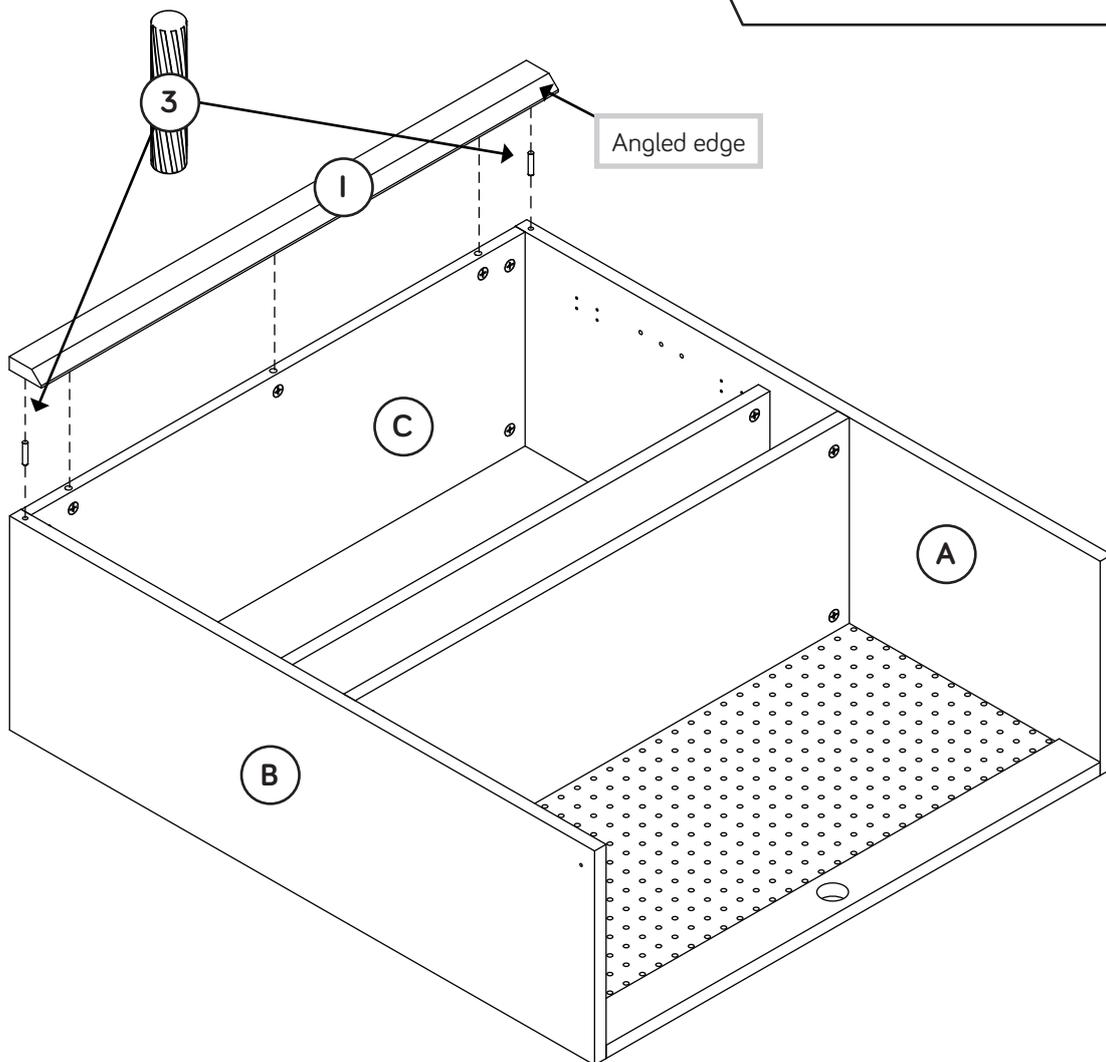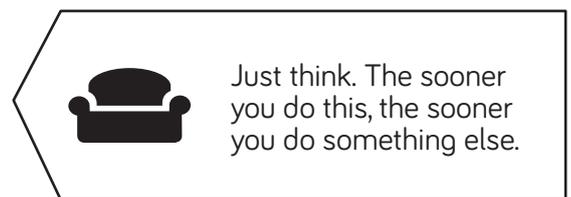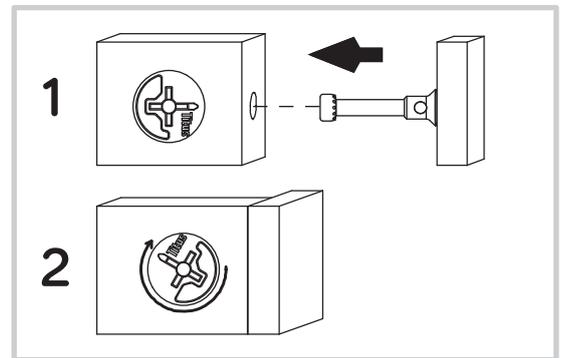

Step 6


- 🔩 Carefully turn your unit over onto its front edges. Tighten four HIDDEN CAMS in the LOWER BRACE (J).
- 🔩 Unfold the BACK (G) and lay it over your unit.
- 🔩 Make equal margins along all four edges of the BACK (G). Push on opposite corners of your unit if needed to make it "square".
- 🔩 Fasten the BACK (G) to the ENDS (A and B) and SHELF (E). Use sixteen SILVER 1/2" FLAT HEAD SCREWS (12).

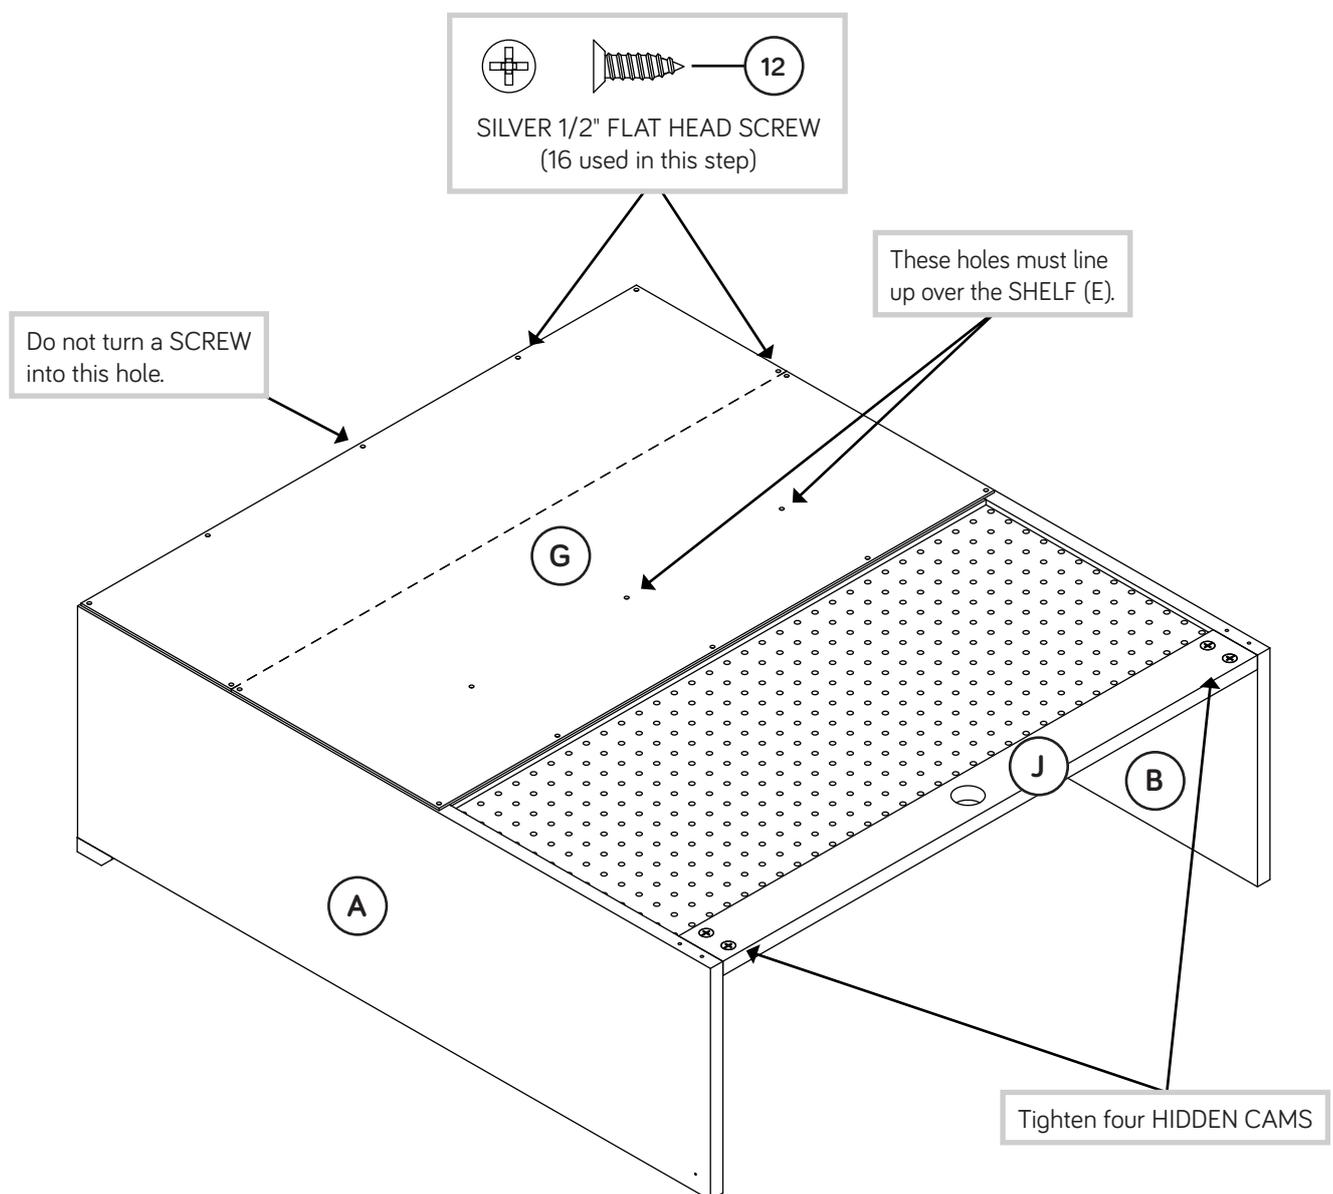

Step 7

- ✚ The 421414 Hutch is made to fit on the 421407 Storage Cabinet, 421405 Open Storage Cabinet, and 421417 Craft Table.
- ✚ **NOTE:** If fastening the 421414 Hutch to the 421417 Craft Table, the hardware and instructions are provided with the Craft Table.
- ✚ With someone's help, carefully set your Hutch on top of your Storage Cabinet.
- ✚ Fasten the CONNECTOR PLATES (8 and 9) to the Hutch ENDS (A and B) and then to the top and ends of the Storage Cabinet. Use ten SILVER 13/16" PAN HEAD SCREWS (11).

Caution

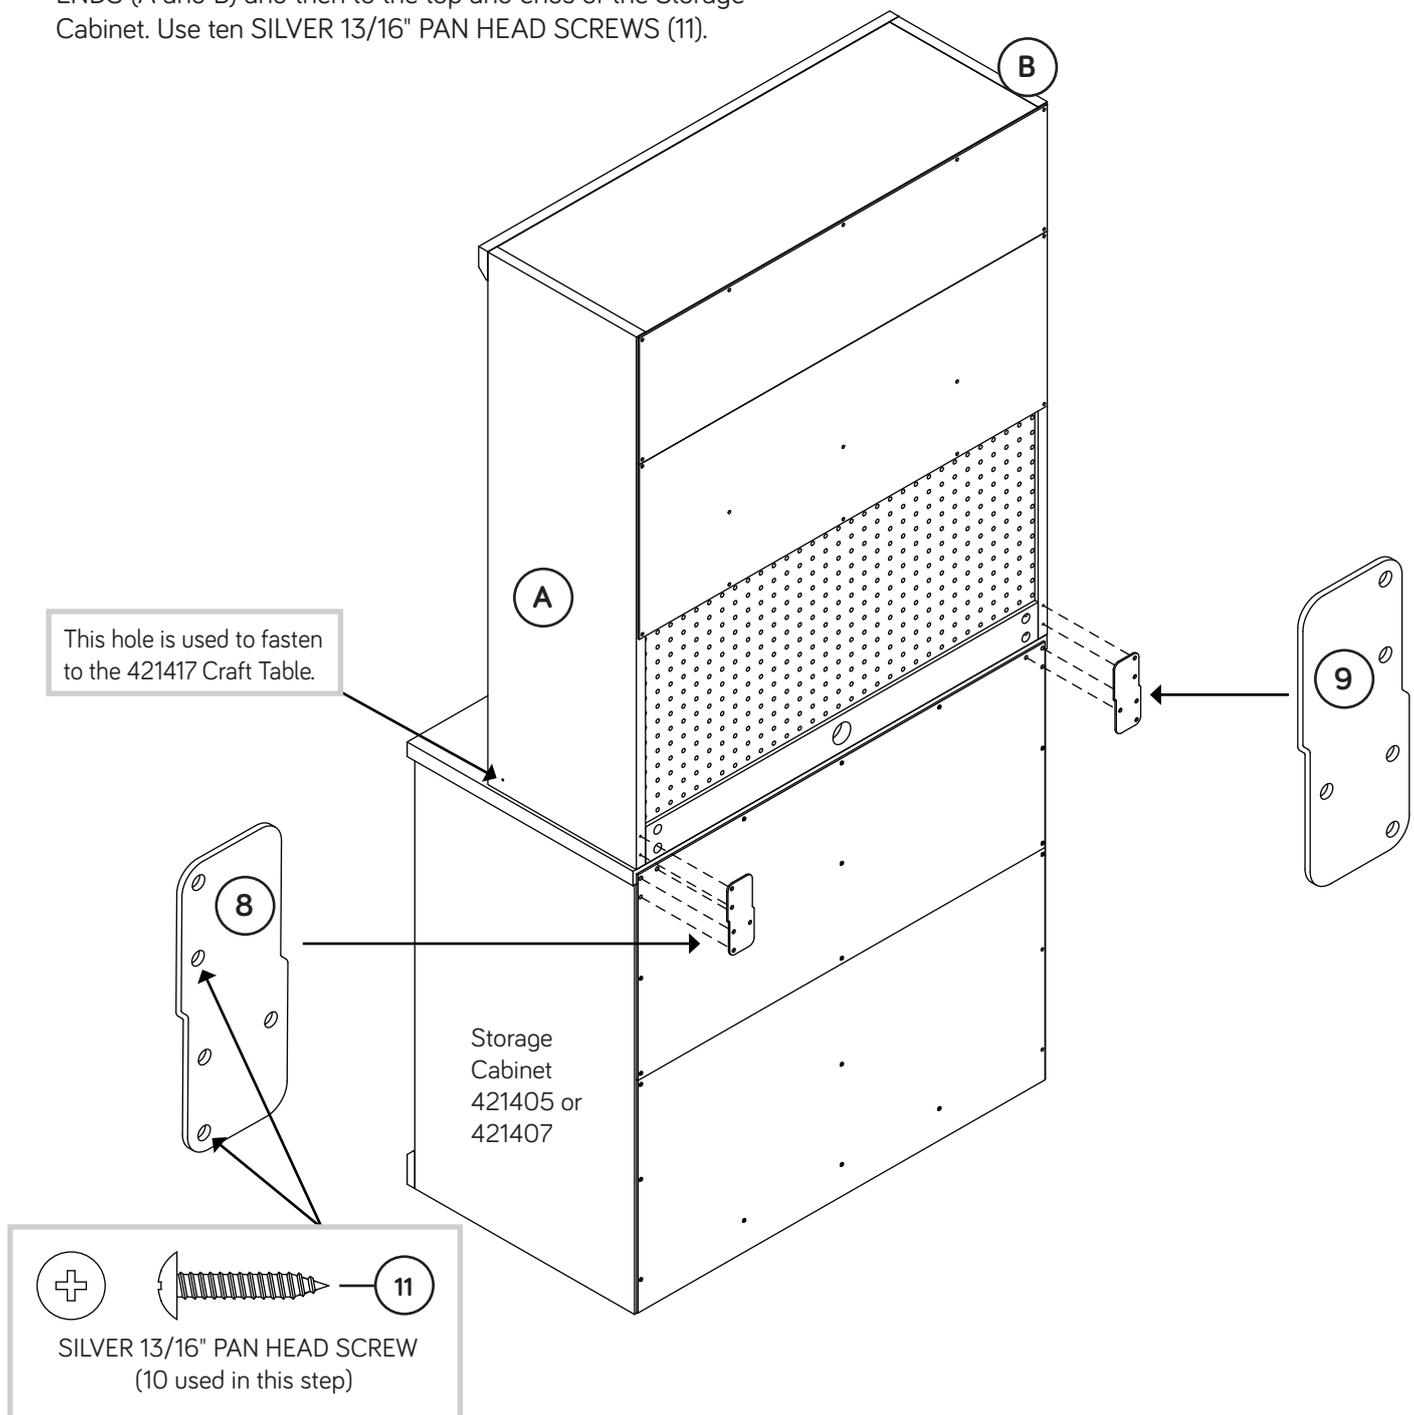


Step 8

Fasten four HINGES (6) to the DOORS (K and L). Use eight SILVER 1/2" FLAT HEAD SCREWS (12).




 If you're doing this to help a friend, don't leave without a bite.




12

SILVER 1/2" FLAT HEAD SCREW
(8 used in this step)

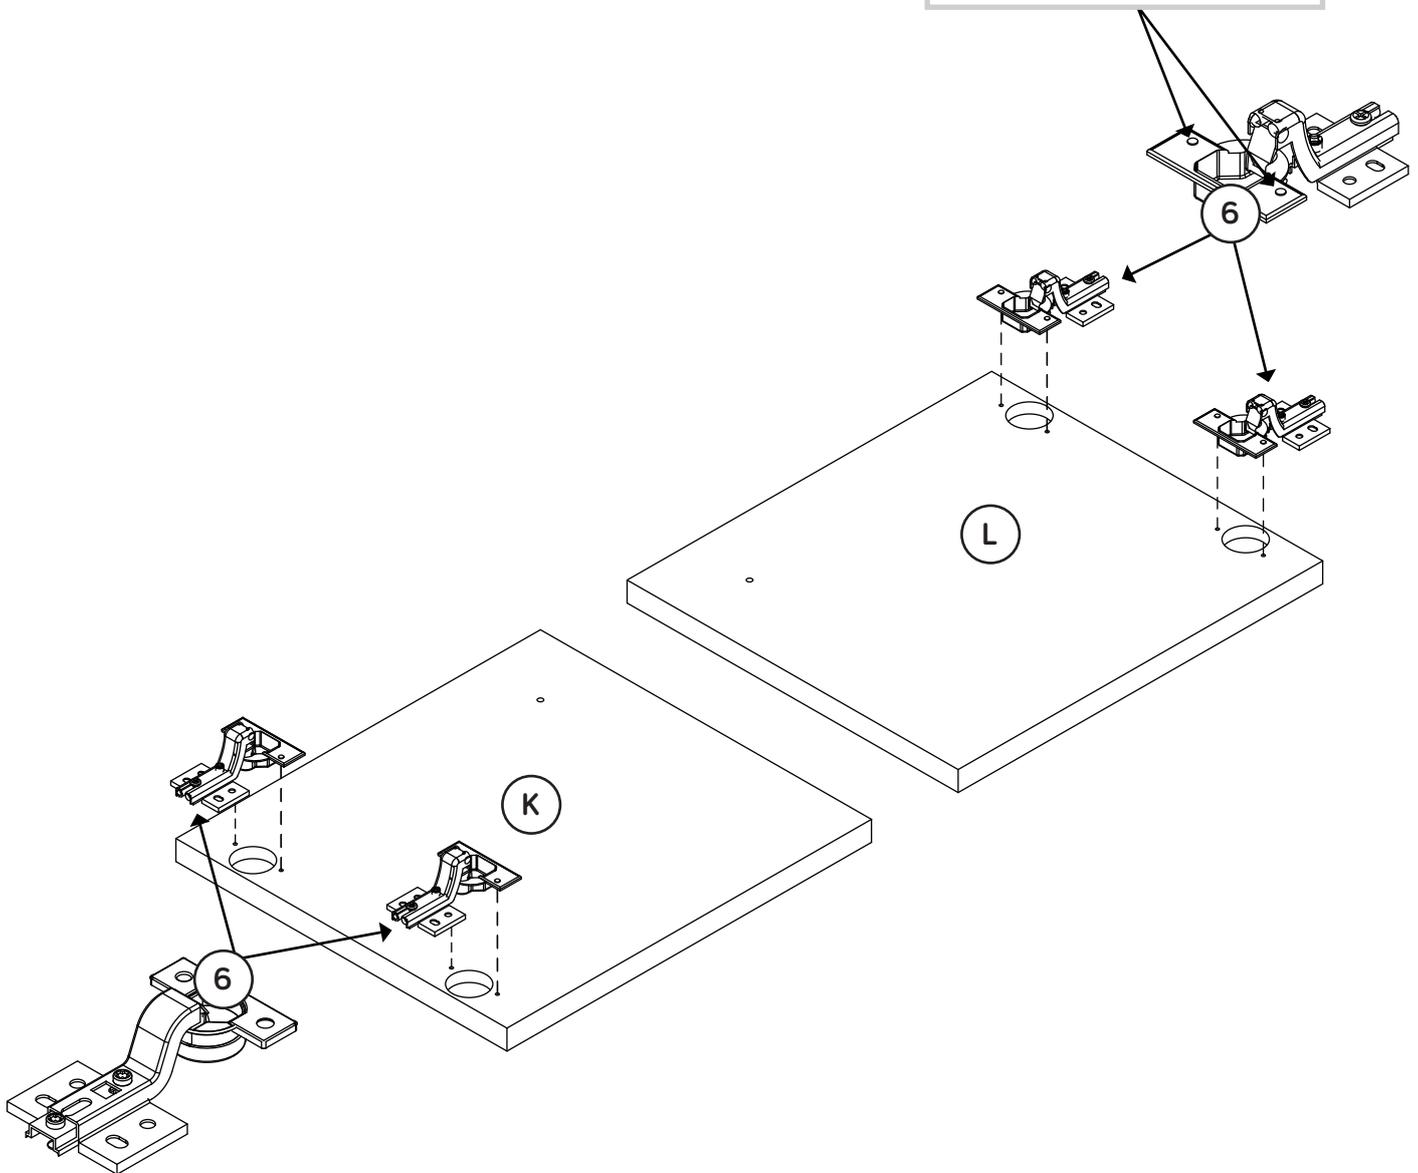

Step 9


- ✚ Push four METAL PINS (7) into the desired holes in the ENDS (A and B).
- ✚ With the groove surface down, set the ADJUSTABLE SHELF (D) onto the METAL PINS (7).
- ✚ Fasten the DOORS (K and L) to the ENDS (A and B). Use sixteen SILVER 1/2" FLAT HEAD SCREWS (12).
- ✚ Fasten the KNOBS (4) to the DOORS (K and L). Use two SILVER 7/8" MACHINE SCREWS (10).
- ✚ Peel a CAM COVER from the CAM COVER CARD (5) and stick one onto each visible HIDDEN CAM.

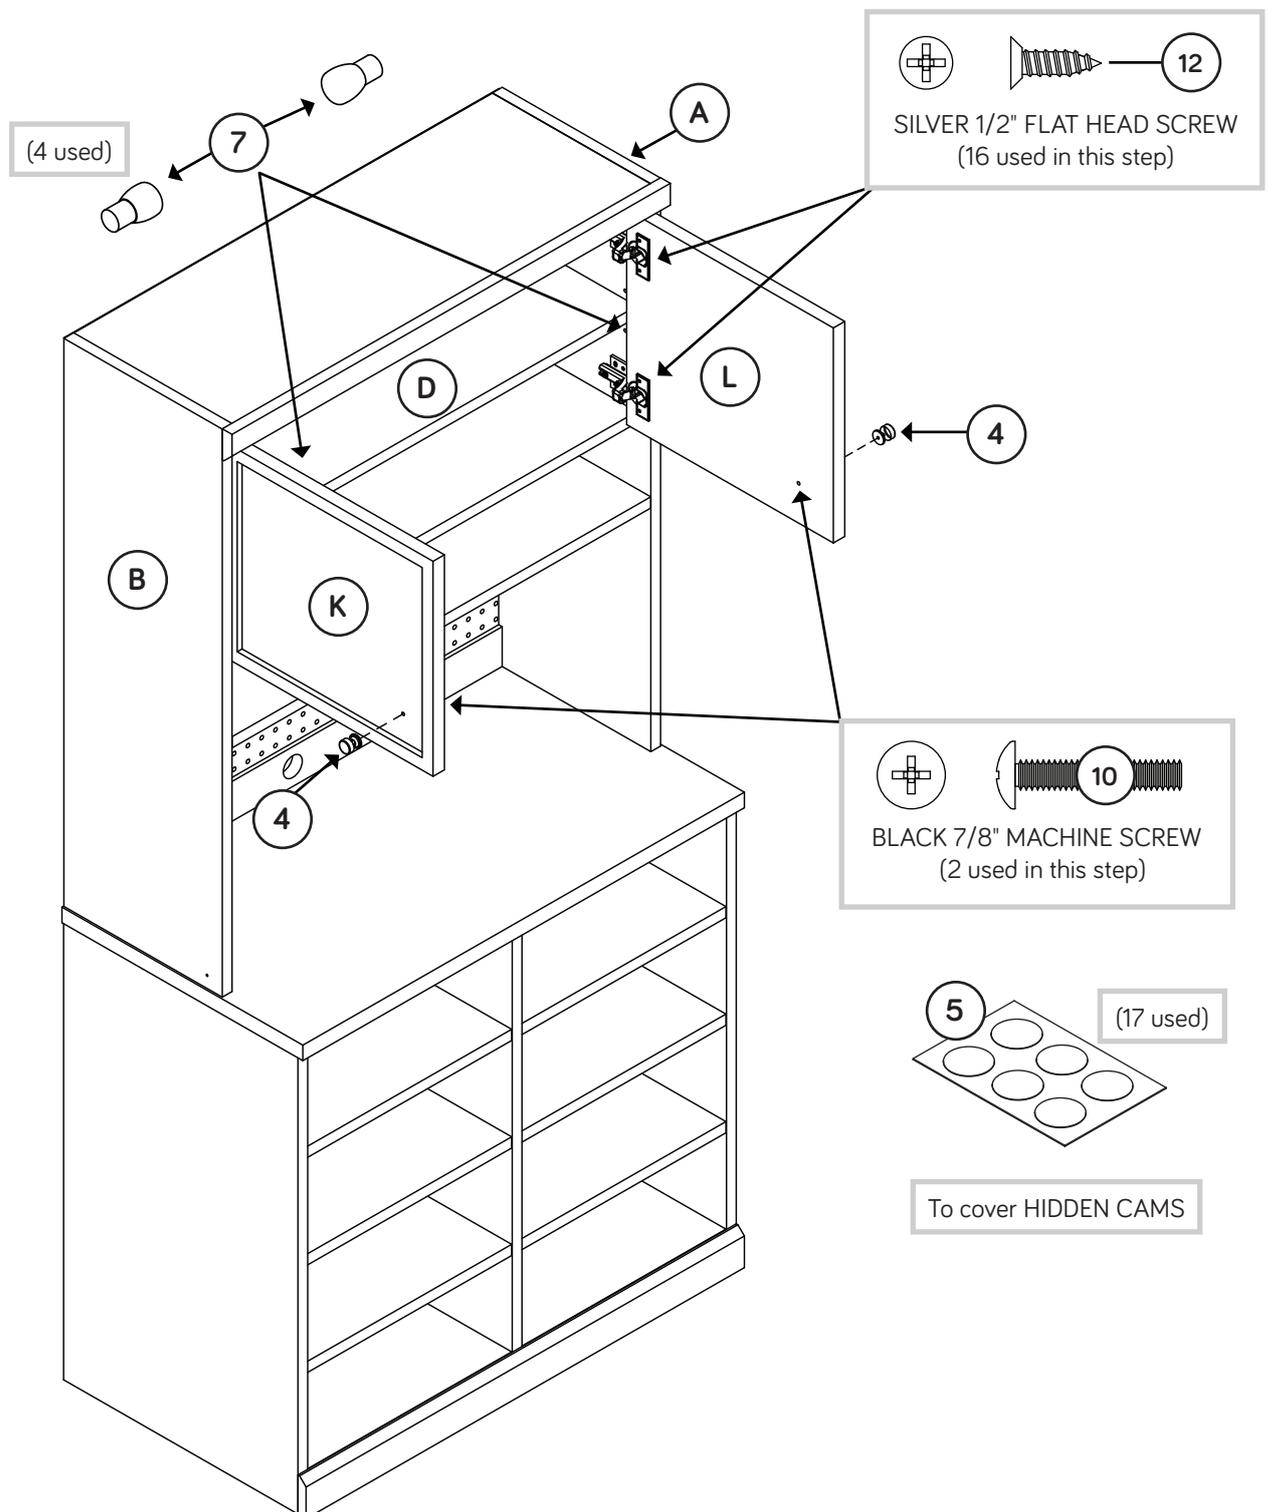

Step 10

- ✚ We recommend using the FURNITURE TIPPING RESTRAINT KIT (99) for added stability. Fasten the bracket with the small hole to the back edge of the TOP (C) using the 5/8" screw as shown.
- ✚ Place your unit in its final location against a wall.
- ✚ Follow the instructions included in the KIT to fasten your unit to the wall.
- ✚ NOTE: Please read the back pages of the instruction booklet for important safety information.
- ✚ This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

Use the 5/8" screw through the small hole in a bracket and into the back edge of the TOP (C).

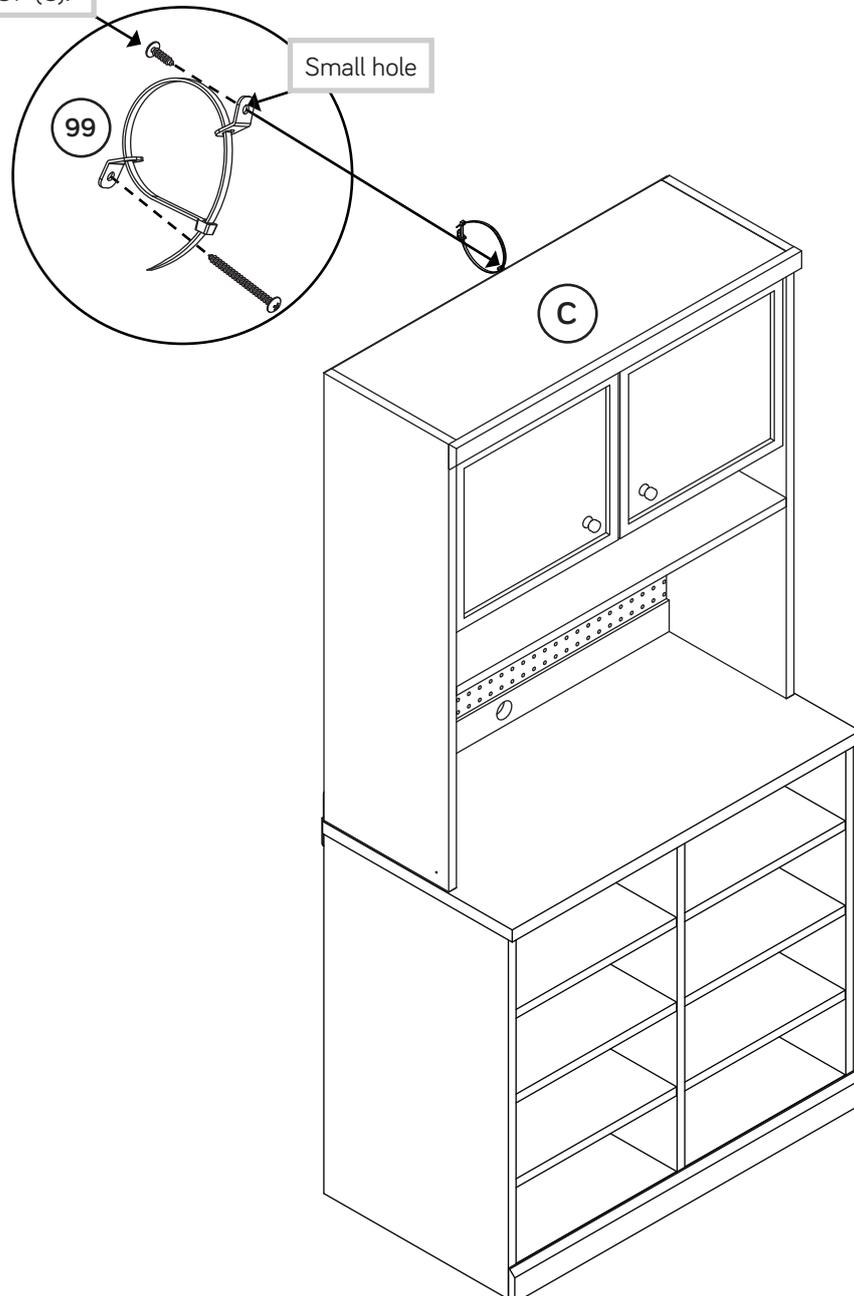

⚠ WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. ***Carefully read the following chart.***

| Look out for: | What can happen: | How to avoid the problem: |
|--|---|--|
| <ul style="list-style-type: none">• Overloaded shelves.• Improper loading can cause the product to be top-heavy. | <ul style="list-style-type: none">• Risk of injury.• Top-heavy furniture can tip over.• Overloaded shelves can break. | <ul style="list-style-type: none">• Never exceed the weight limits shown in the instructions.• Work from bottom to top when loading shelves. Place the heavier items on the lower shelves. |
| <ul style="list-style-type: none">• Improperly moving furniture that is not designed and equipped with casters. | <ul style="list-style-type: none">• Furniture can tip over or break if improperly moved.• Physical injury. Furniture can be very heavy. | <ul style="list-style-type: none">• Unload shelves from top to bottom before moving the furniture.• Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place.• This unit must be positioned against a wall. |
| <ul style="list-style-type: none">• Children climbing on the shelves can cause the product to tip. | <ul style="list-style-type: none">• Risk of injury or death. | <ul style="list-style-type: none">• Do not allow children to climb on the shelves. Avoid placing items like toys or candy on upper shelves.• Use the tipping restraint kit for added stability. |
| <ul style="list-style-type: none">• Placing TVs on furniture items that are not designed to support a television is hazardous. | <ul style="list-style-type: none">• Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward. | <ul style="list-style-type: none">• This product is not designed to support a television. |