
www.teknikoffice.co.uk

Teknik

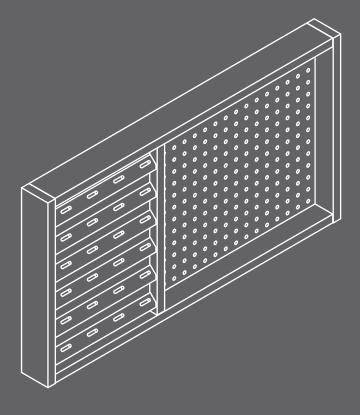

Get crafty.

Wall Mounted Pegboard with Thread Storage

Craft Collection | Model 5423412


NOTE: THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Assembly Tools Required

Part Identification	3
Hardware Identification	3
Assembly Steps	4-6
Français	7
Español	8
Safety	9-10
Warranty	11

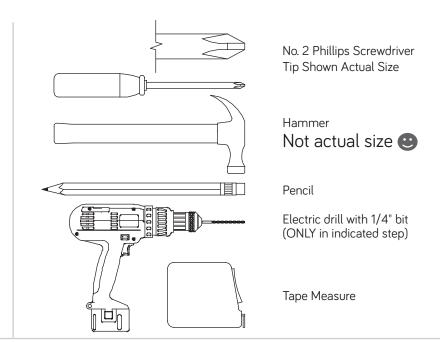


Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

UNIT (1)

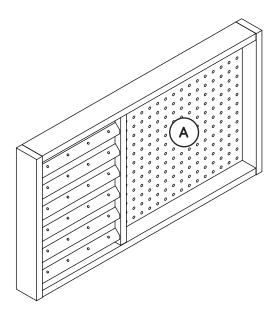

Hardware Identification

Screws are shown actual size. You may receive extra hardware with your unit.

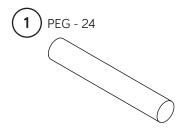








SILVER 1-1/2" PAN HEAD SCREW - 2



 


SILVER 7/16" PAN HEAD SCREW - 4






Step 1

- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Turn the UNIT (A) onto its front edges.
- Fasten the BRACKETS (3) to the UNIT (A) exactly as shown. Use four SILVER 7/16" PAN HEAD SCREWS (5).

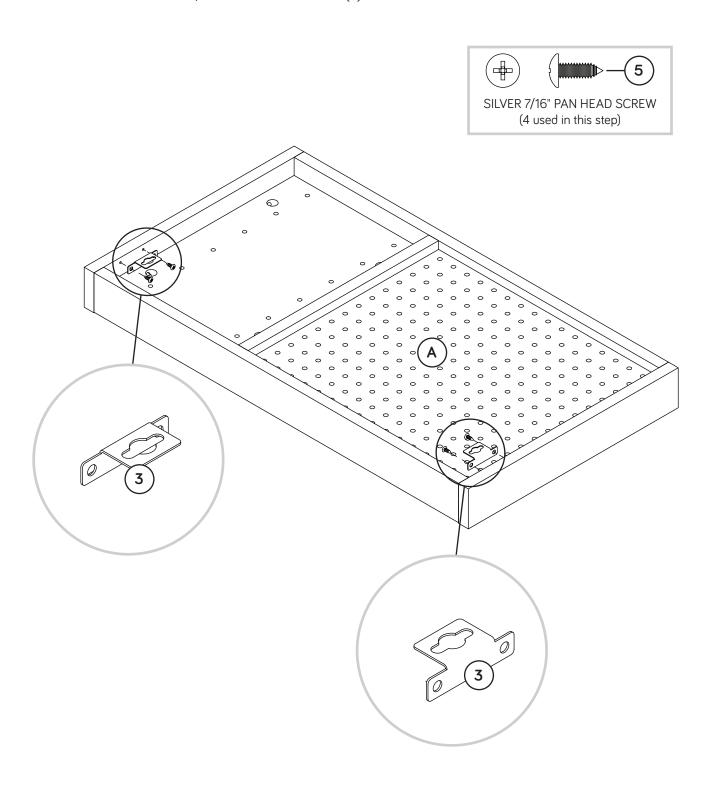


Step 2

- Stand your unit upright.
- Insert the PEGS (1) into the UNIT (A).

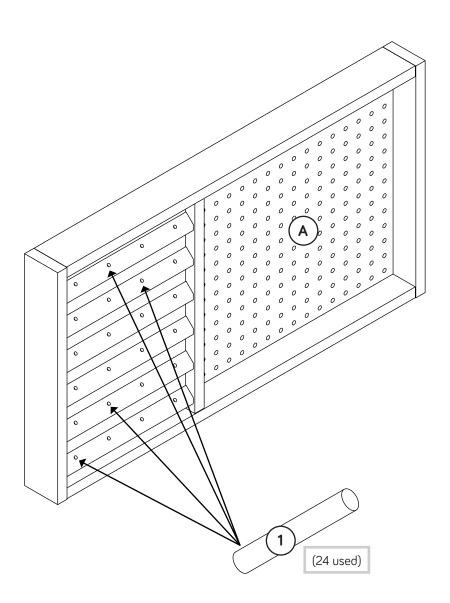

Step 3

- The centers of the BRACKETS used to hang your unit are spaced 25-5/8" apart. With your tape measure, measure the distance on your wall. Then, mark the locations on your wall with a pencil. The marks should be 2-5/16" down from the top of your unit.
- Next, drill the holes that are marked on the wall using a 1/4" drill bit.
- NOTE: If attaching the Thread Storage to a wall made of concrete, plaster, or other material, go to your local hardware store for proper hardware.
- Using your hammer, gently tap the WALL ANCHORS (2) into the holes in your wall. Then, turn two SILVER 1-1/2" PAN HEAD SCREWS (4) into the WALL ANCHORS (2).
- NOTE: Do not use a power screwdriver to tighten the SCREWS.
- NOTE: Do <u>not</u> completely tighten the SCREWS. There should be approximately a 3/16" gap between the SCREW and WALL ANCHOR.
- Carefully insert the SCREWS in your wall into the large holes in the brackets on the back of your unit. Then set the unit down into place.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

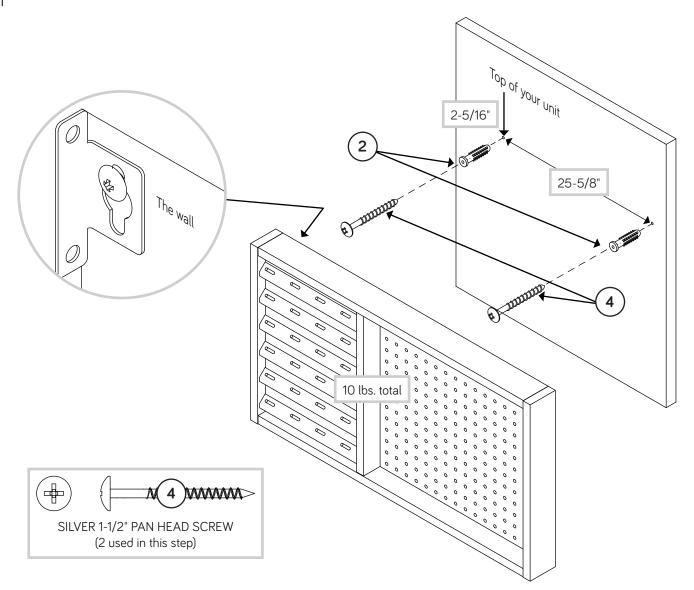

▲ WARNING Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following chart. What can happen: How to avoid the problem: • If not properly mounted, the shelf can fall from the wall and cause injury and damage. • Properly mounting the shelf to the wall. • Carefully review and follow the mounting instructions contained in this manual. Risk of injury or property damage.Overloaded furniture can break. • Never exceed the weight limits shown in the instructions.

• This product is not designed to support a

television.

• Risk of injury or death. TV's can be very

heavy. Plus the weight and location of

forward.

the picture screen can make furniture tip

Look out for:

• Overloaded shelves.

• Improper use of furniture to support TV's.

• Placing TV's on furniture items not

intended to support them is hazardous.